

Golf/Vento

Current Flow Diagram

No. 82 / 1


Edition 08.1994

Lights switched on warning buzzer

From August 1994

Position of relays:

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

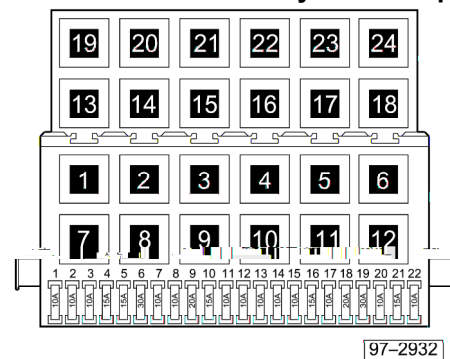

9 - Lights switched on warning buzzer (36)



Notes:

- ♦ The number in brackets behind the part designation denotes
- ♦ the control number on the housing.


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

Golf/Vento

Current Flow Diagram

No. 82 / 2

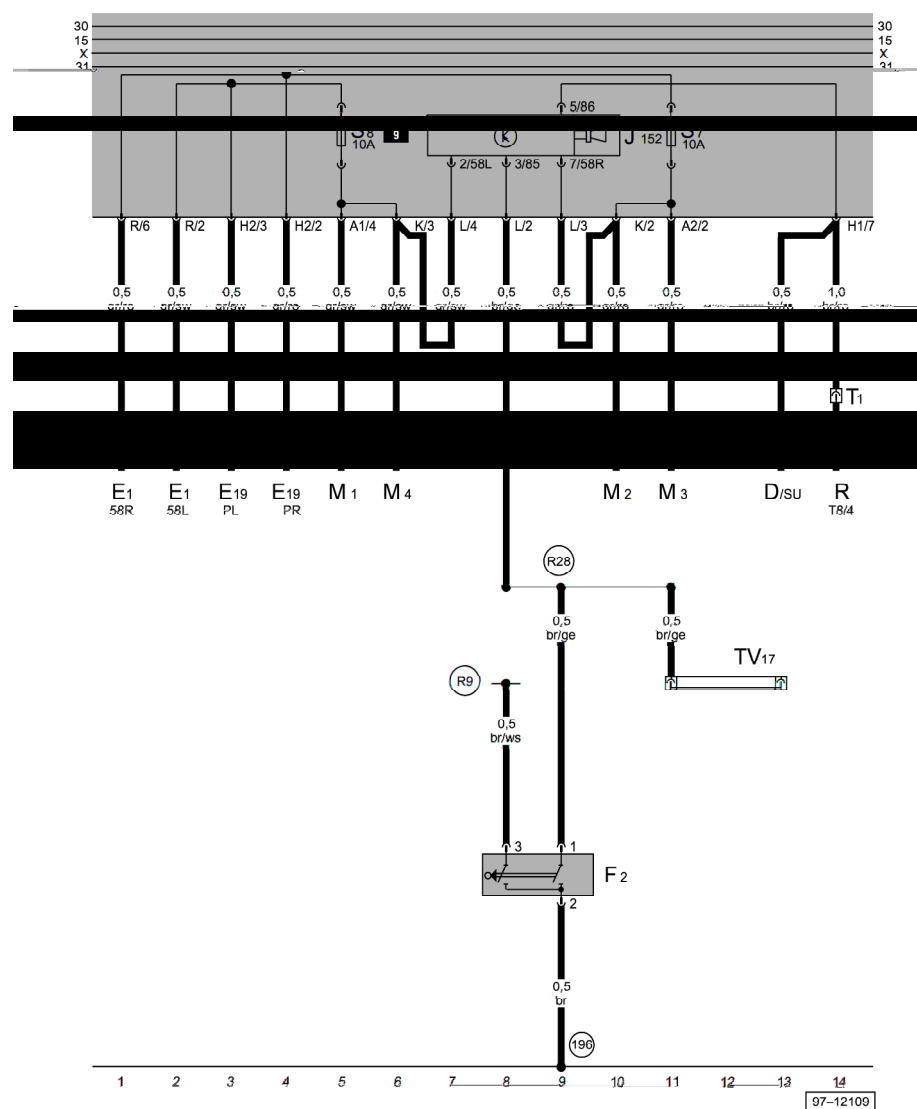

Lights switched on warning buzzer

- D - Ignition/starter switch
- E1 - Lighting switch
- E19 - Parking light switch
- F2 - Door contact switch, driver's side
- J125 - Lights switched on warning buzzer
- M1 - Side light bulb, left
- M2 - Tail light bulb, right
- M3 - Side light bulb, right
- M4 - Tail light bulb, left
- R - Radio
- T1 - Single connector
- T8 - 8-pin connector, on radio
- TV17 - Terminal for door contact switch
- 196 - Earth connection -1-, in rear wiring harness
- R9 - Connection (door contact switch), in rear wiring harness
- R28 - Connection -2- (door contact switch), in rear wiring harness