

# Golf/Vento

## Current Flow Diagram

No. 1 / 1


Edition 03.2000

### 1.9 l/47 kW diesel engine, engine codes 1 Y

From October 1991

#### Position of relays:

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

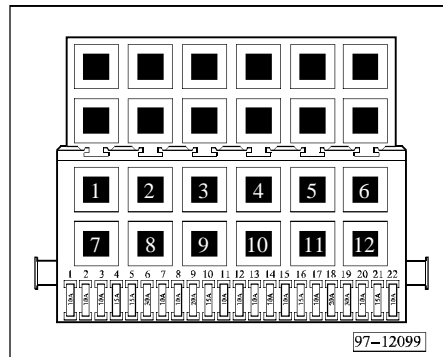

- 2 - Rear window wiper/washer relay (72)
- 4 - X contact relief relay (18)
- 6 - Hazard warning light relay (21) or trailer towing hazard warning lights relay (22)
- 8 - Automatic intermittent wash/wipe relay (19.99)
- 11 - Dual tone horn relay (53)
- 12 - Glow plug relay (102)



#### Note:

The number in brackets behind the part designation denotes the control number on the housing.

Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red






G /V I


w F D


N . 1 / 4


# Glow plug system

J52 -wG  
N109 -  
Q6 -wG  
S15 -  
S39 - S  
T17 - 17  
D98 - C

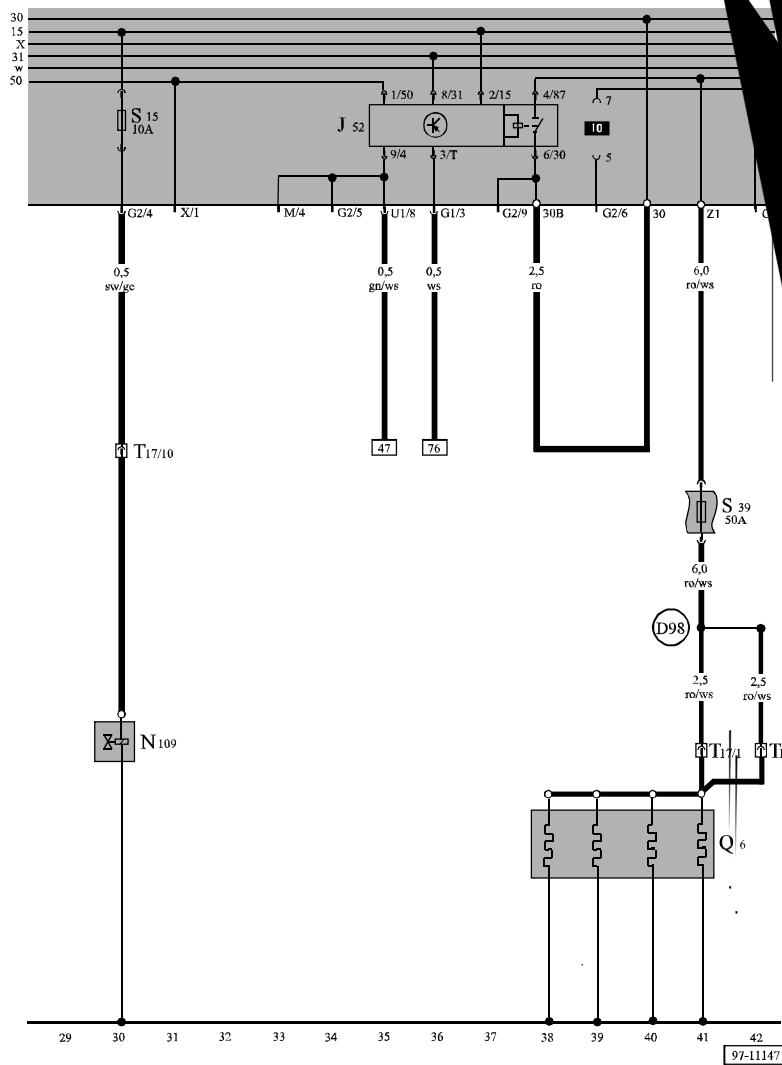

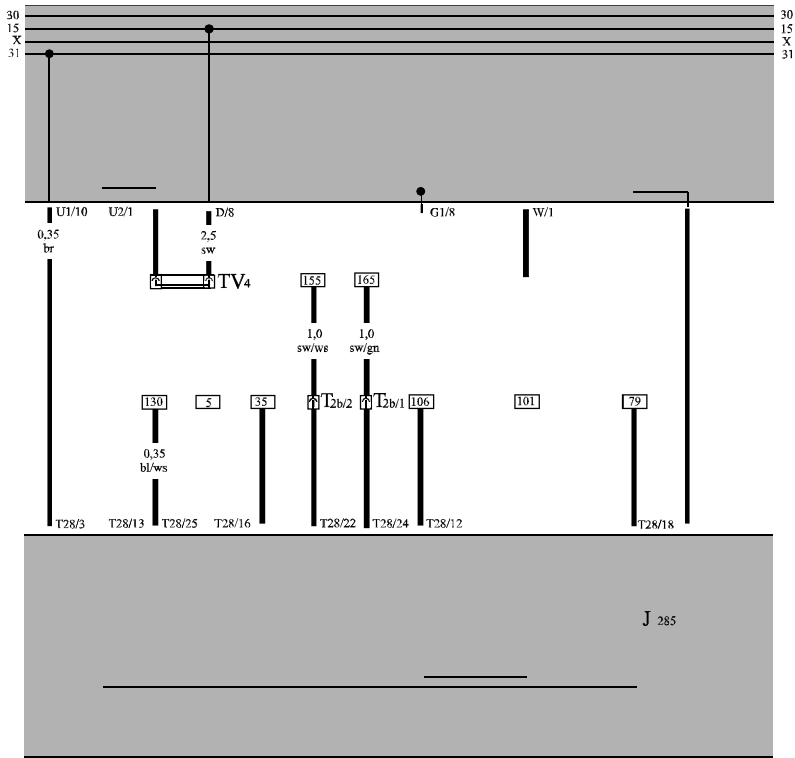

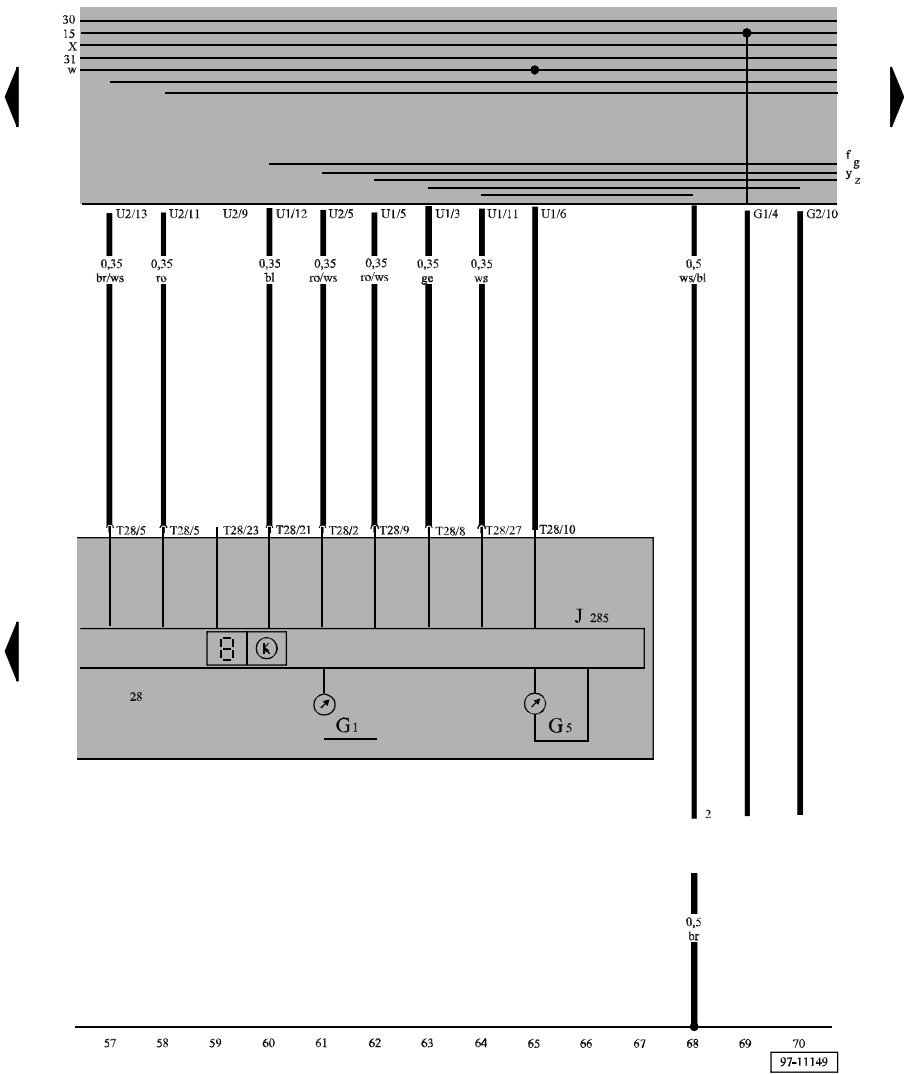


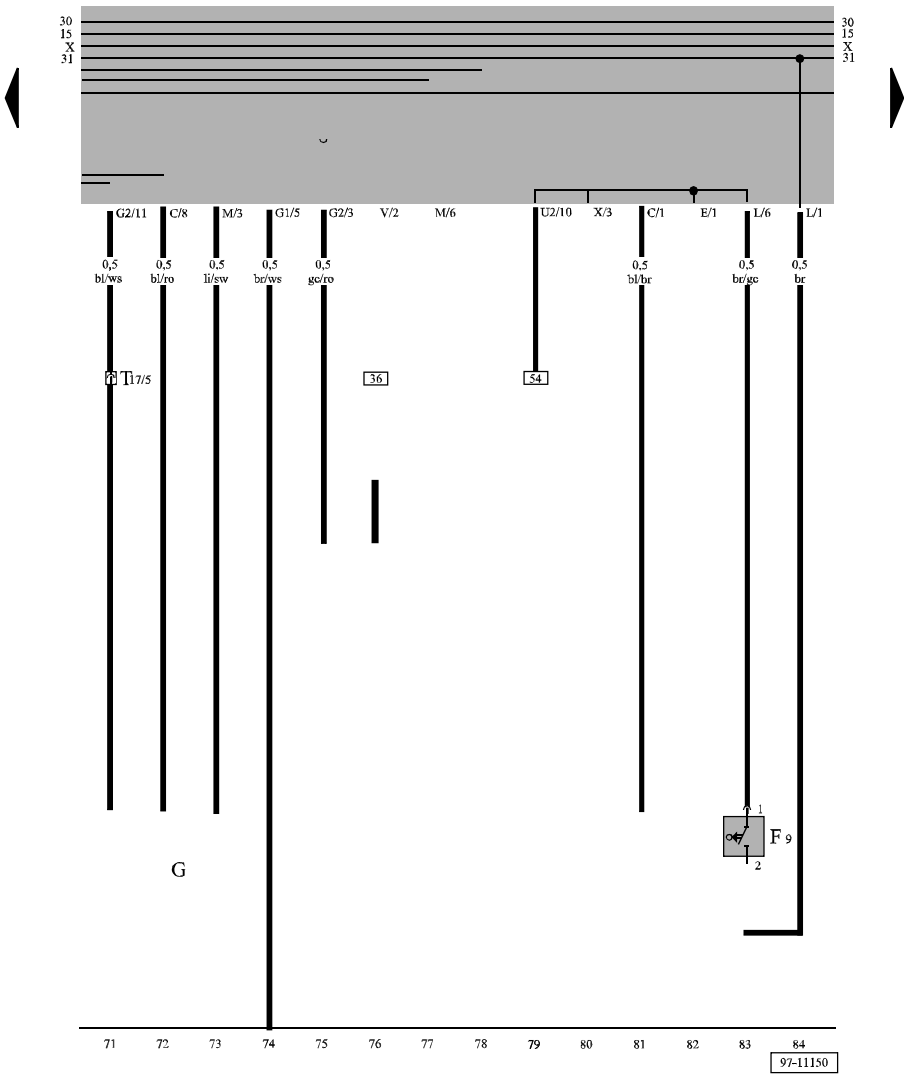

## Golf/Vento

## Current Flow Diagram

No. 1 / 8

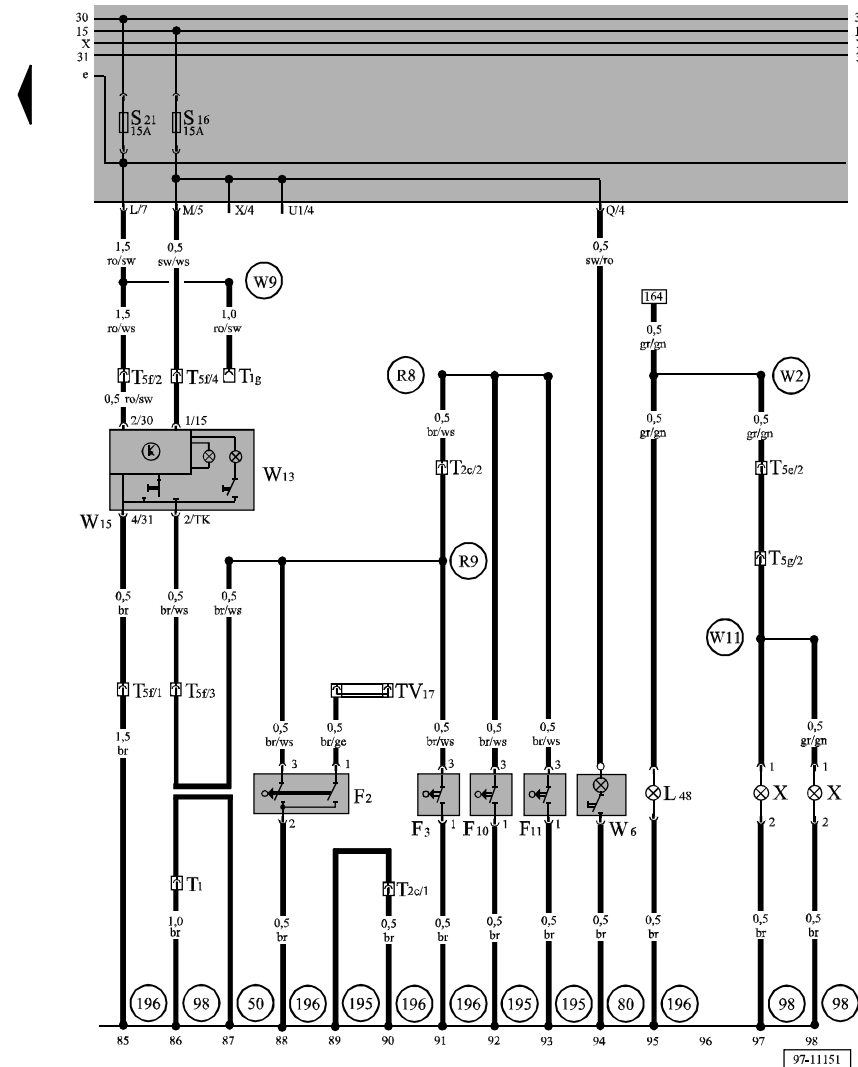


## Interior light, luggage compartment light, number plate light

- F2 - Door contact switch, driver's side
- F3 - Door contact switch, front passenger's side
- F10 - Rear left door contact switch
- F11 - Rear right door contact switch
- L48 - Rear ashtray light bulb, left
- S16 - Fuse in fuse box/relay plate
- S21 - Fuse in fuse box/relay plate
- T1 - Single connector, in luggage compartment, left
- T1g - Single connector, on lower part of left A pillar
- T2c - 2-pin connector, on lower part of left A pillar
- T5e - 5-pin connector, on rear cross panel
- T5f - 5-pin connector, above the relay plate
- T5g - 5-pin connector, in tailgate/bootlid
- TV17 - Terminal for door contact switch, above the relay plate
- W6 - Glove box light
- W13 - Front passenger reading lamp
- W15 - Interior light with switch-off delay
- X - Number plate light
- 50 - Earth point, luggage compartment, left
- 80 - Earth connection -1-, in dash panel wiring harness
- 98 - Earth connection, in tailgate/boot lid wiring harness
- 195 - Earth connection, in rear door contact switch wiring harness
- 196 - Earth connection -3-, in rear wiring harness

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 vi = purple  
 ge = yellow  
 or = orange  
 rs = pink



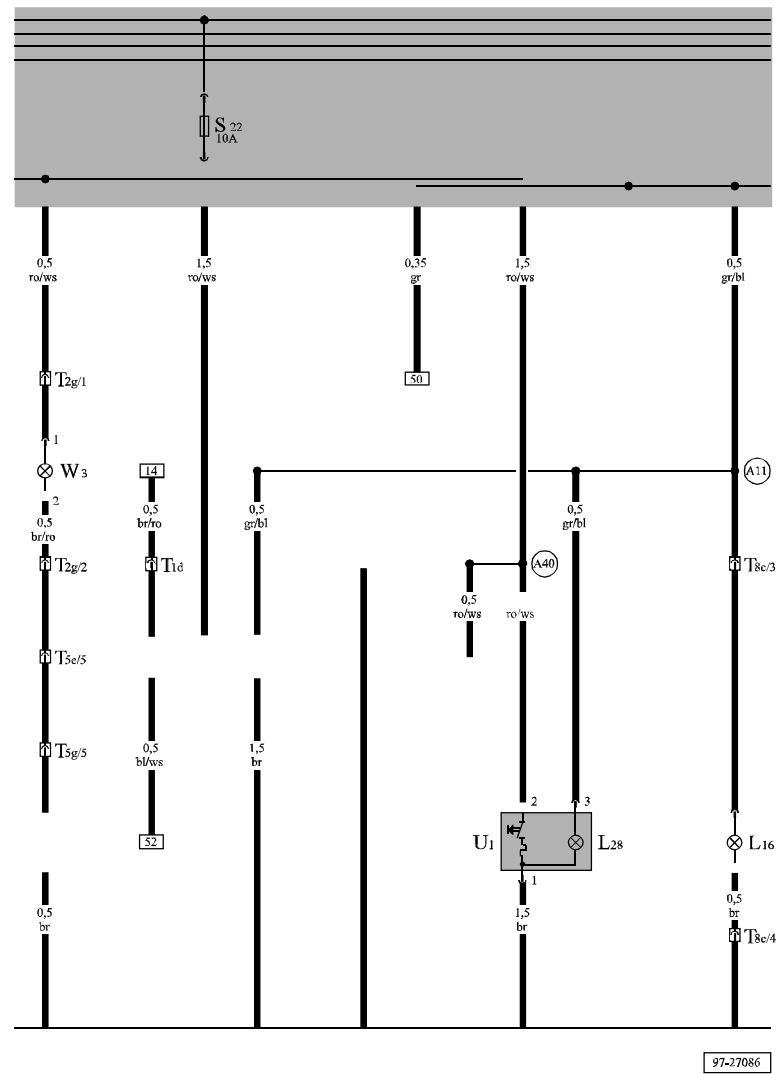




1

## Golf/Vento

## Current Flow Diagram

No. 1 / 11

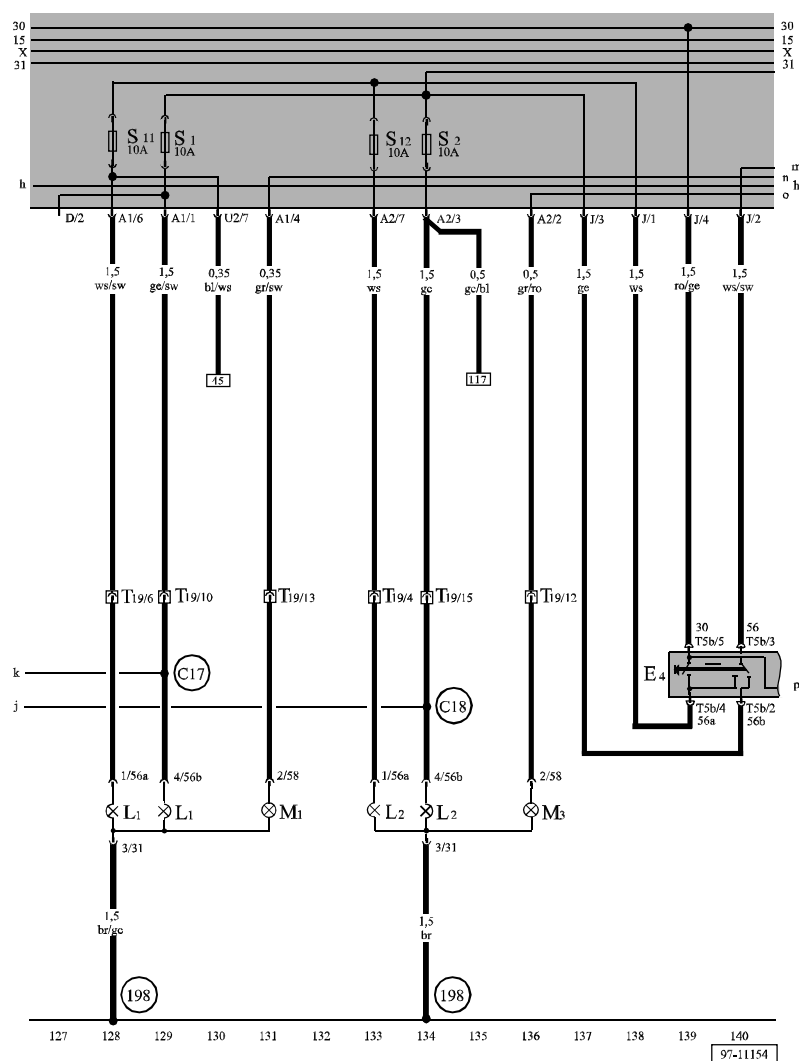


## Headlight, side light, headlight dipper/flasher switch

- E4 - Headlight dipper/flasher switch
- L1 - Twin filament bulb for headlight, left
- L2 - Twin filament bulb for headlight, right
- M1 - Side light bulb, left
- M3 - Side light bulb, right
- S1 - Fuse in fuse box/relay plate
- S2 - Fuse in fuse box/relay plate
- S11 - Fuse in fuse box/relay plate
- S12 - Fuse in fuse box/relay plate
- T5b - 5-pin connector, behind steering column switch trim
- T19 - 19-pin connector, on right behind radiator grille
- 198 - Earth connection, in front lighting wiring harness
- C17 - Connection (56b) -1-, in front lighting wiring harness
- C18 - Connection (56b) -2-, in front lighting wiring harness


ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 vi = purple  
 ge = yellow  
 or = orange  
 rs = pink

f/Vent

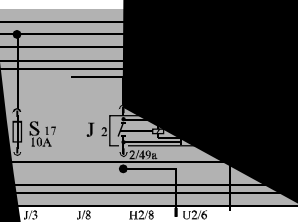

# Current Flow Diagram

No. 1 / 13

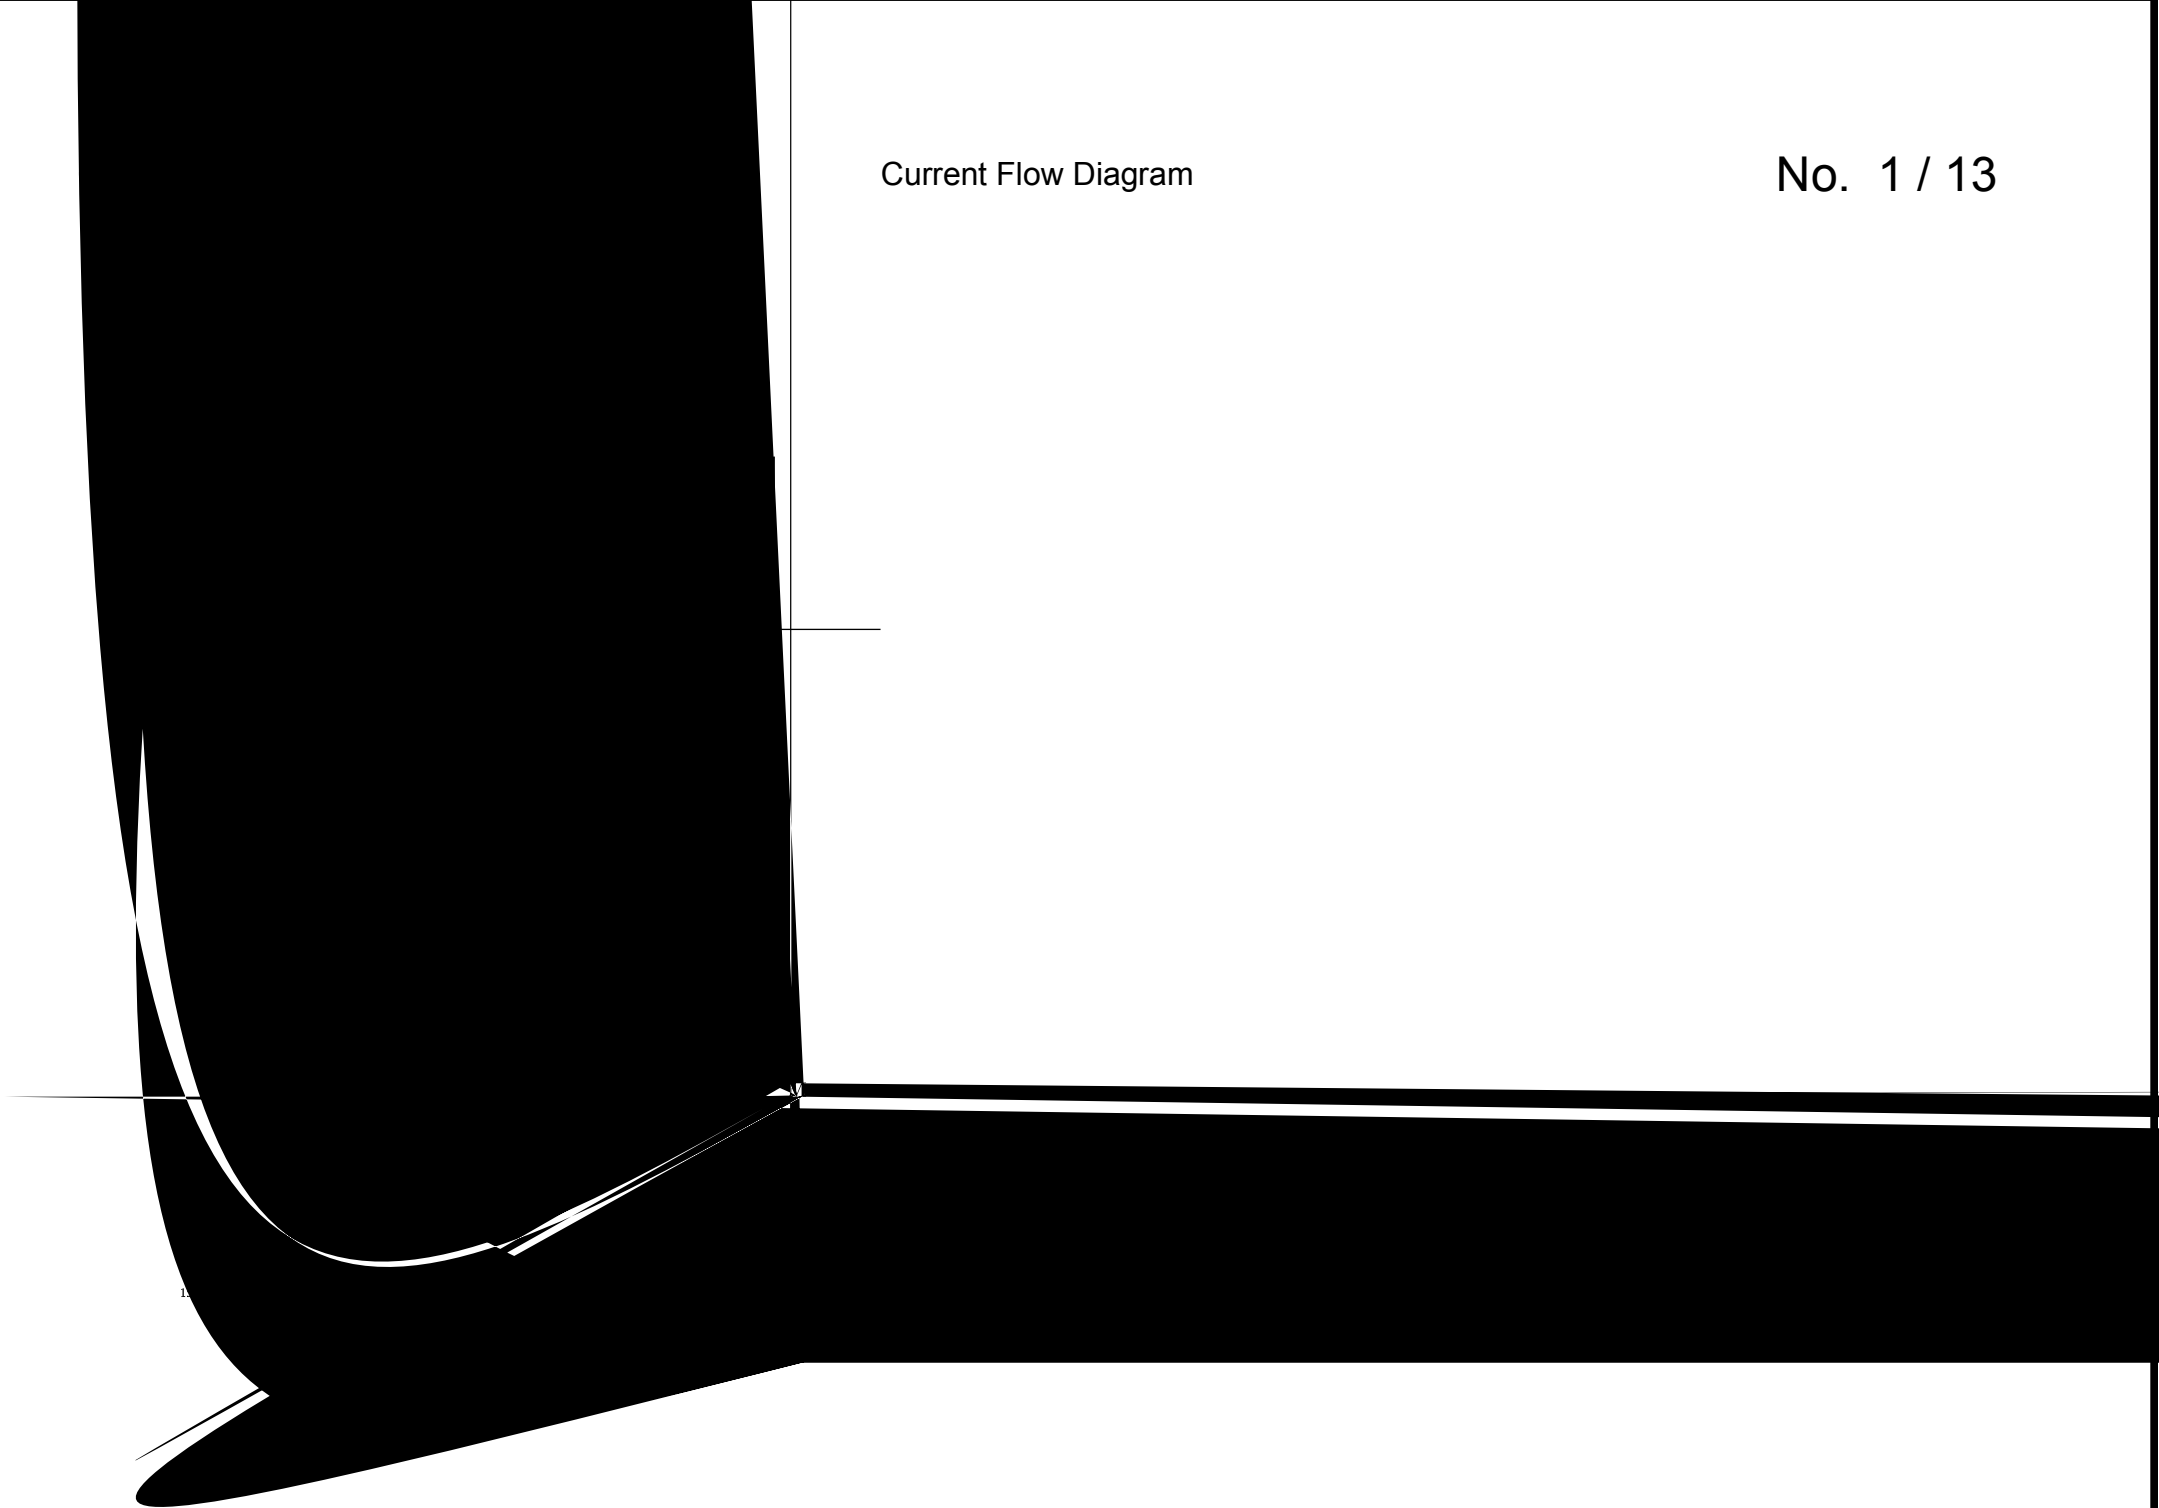

Current Flow Diagram

No. 1 / 14

0.5 bc

1.5 gr61

$T_{3/1}$

$1/58b$  E<sub>20</sub>


$T_{19/8}$

119

180 181 182

97-12971

No. 1 / 14

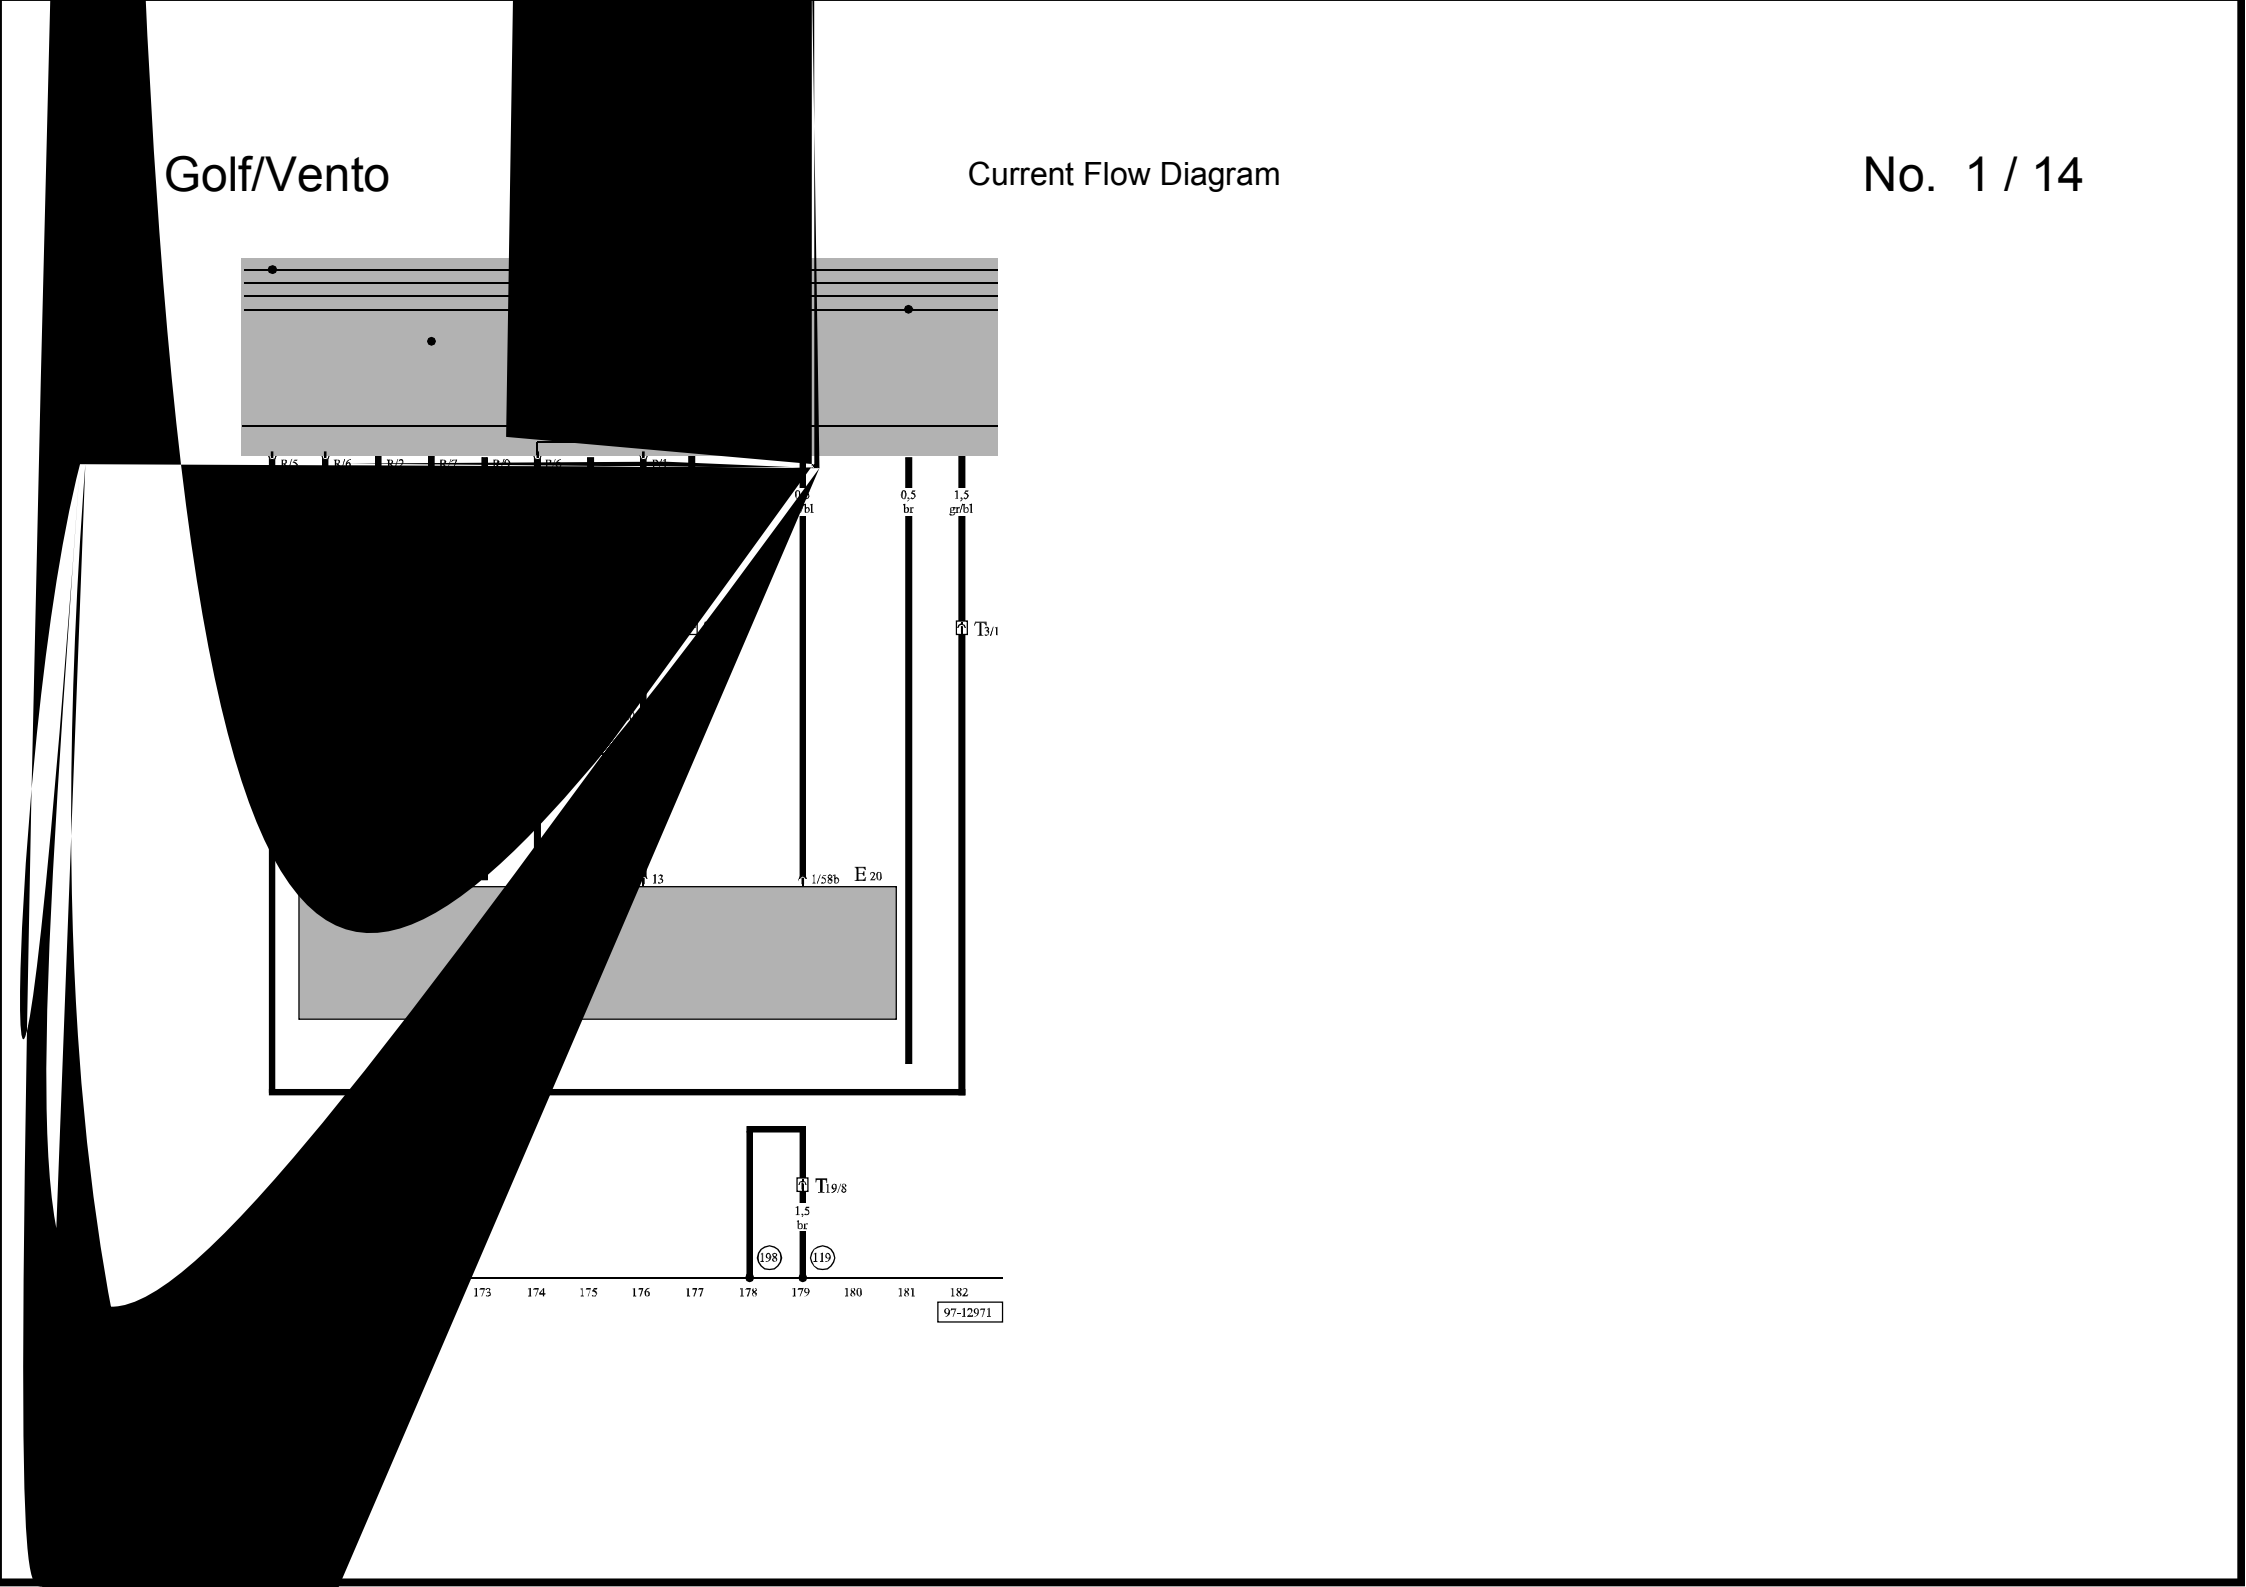

Golf

30  
15  
X  
31

