

Golf/Vento

Current Flow Diagram

No. 2 / 1

Edition 07.2006

1.8 l/55 kW Mono-Motronic, engine code AAM

from October 1991

1.8 l/66 kW Mono-Motronic, engine code ABS

from October 1991

Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ List of Fitting Locations!

For information concerning


- ◆ Fault Finding Programs

→ guided fault finding

Golf/Vento

Current Flow Diagram

No. 2 / 2

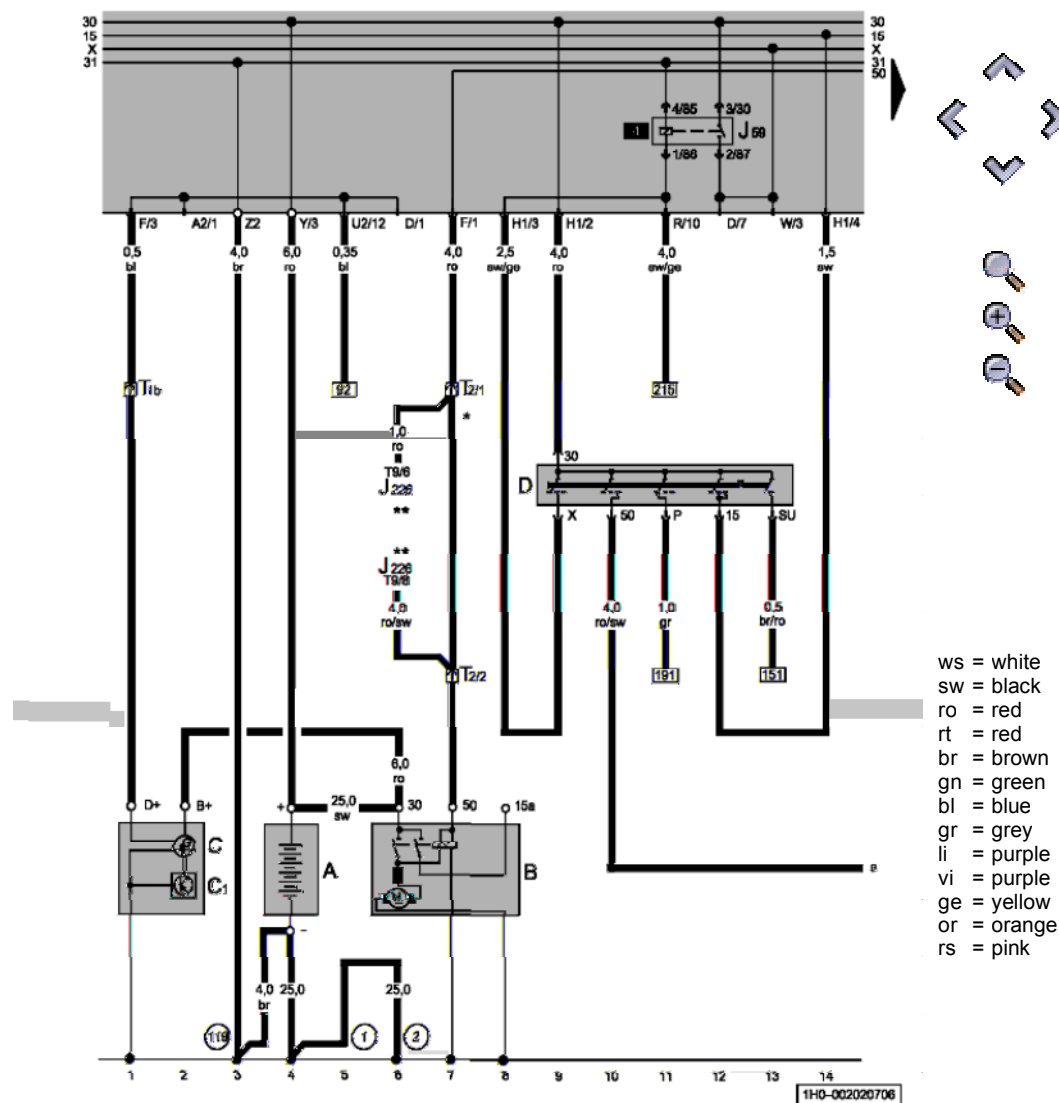


Alternator, battery, starter, ignition/starter switch

- A - Battery
- B - Starter
- C - Alternator
- C1 - Voltage regulator
- D - Ignition/starter switch
- J59 - X-contact relief relay
- J226 - Starter inhibitor and reversing light relay
- T1b - Single connector, near battery
- T2 - 2-pin connector, behind the relay plate
- T9 - 9-pin connector, on starter inhibitor and reversing light relay
- 1 - Earth strap, battery - body
- 2 - Earth strap, gearbox - body
- 119 - Earth connection 3, in headlight wiring harness
- * - only manual gearbox
- ** - only automatic gearbox

Golf/Vento


Current Flow Diagram

No. 2 / 3

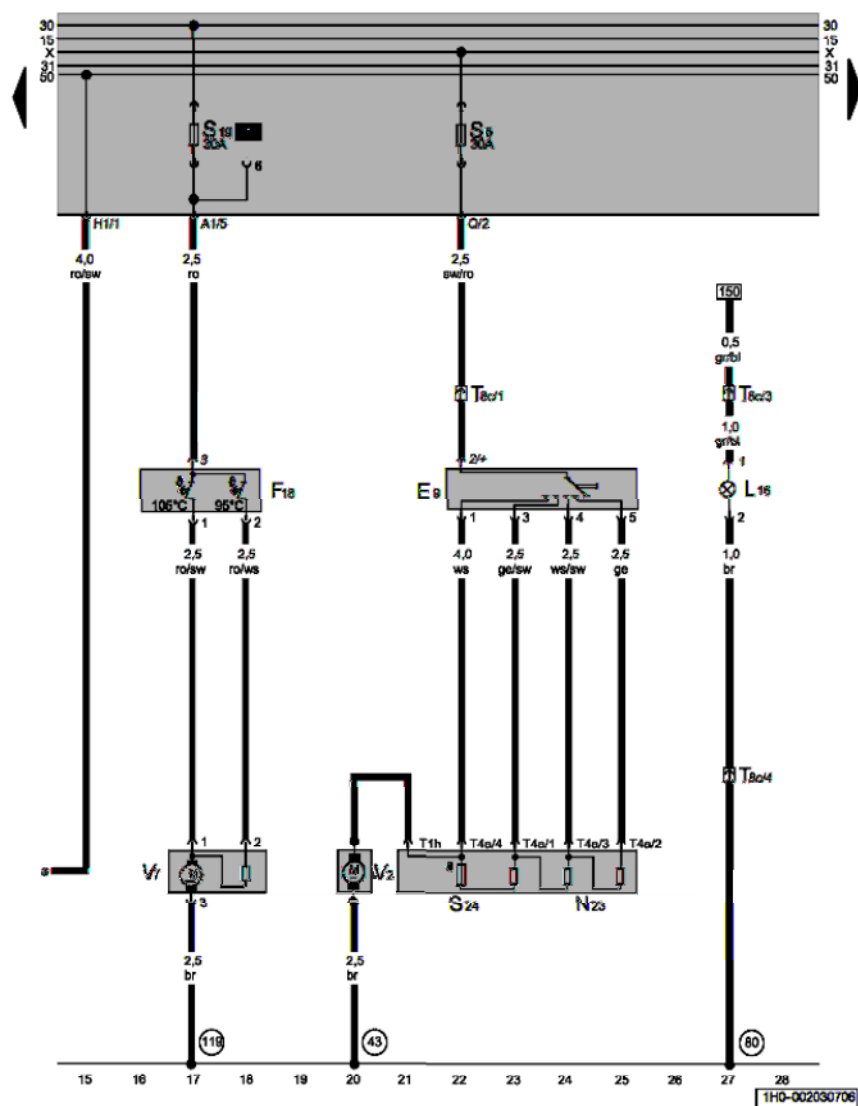**Radiator fan, fresh air blower**

- E9 - Fresh air blower switch
- F18 - Thermal switch for radiator fan
- L16 - Fresh air regulator illumination bulb
- N23 - Fresh air blower series resistor
- S24 - Overheating sensor
- T8c - 8-pin connector, behind centre dash panel
- V2 - Fresh air blower
- V7 - Radiator fan
- 43 - Earth point, lower part of right A-pillar
- 80 - Earth connection 1, in dash panel wiring harness
- 119 - Earth connection 1, in headlight wiring harness



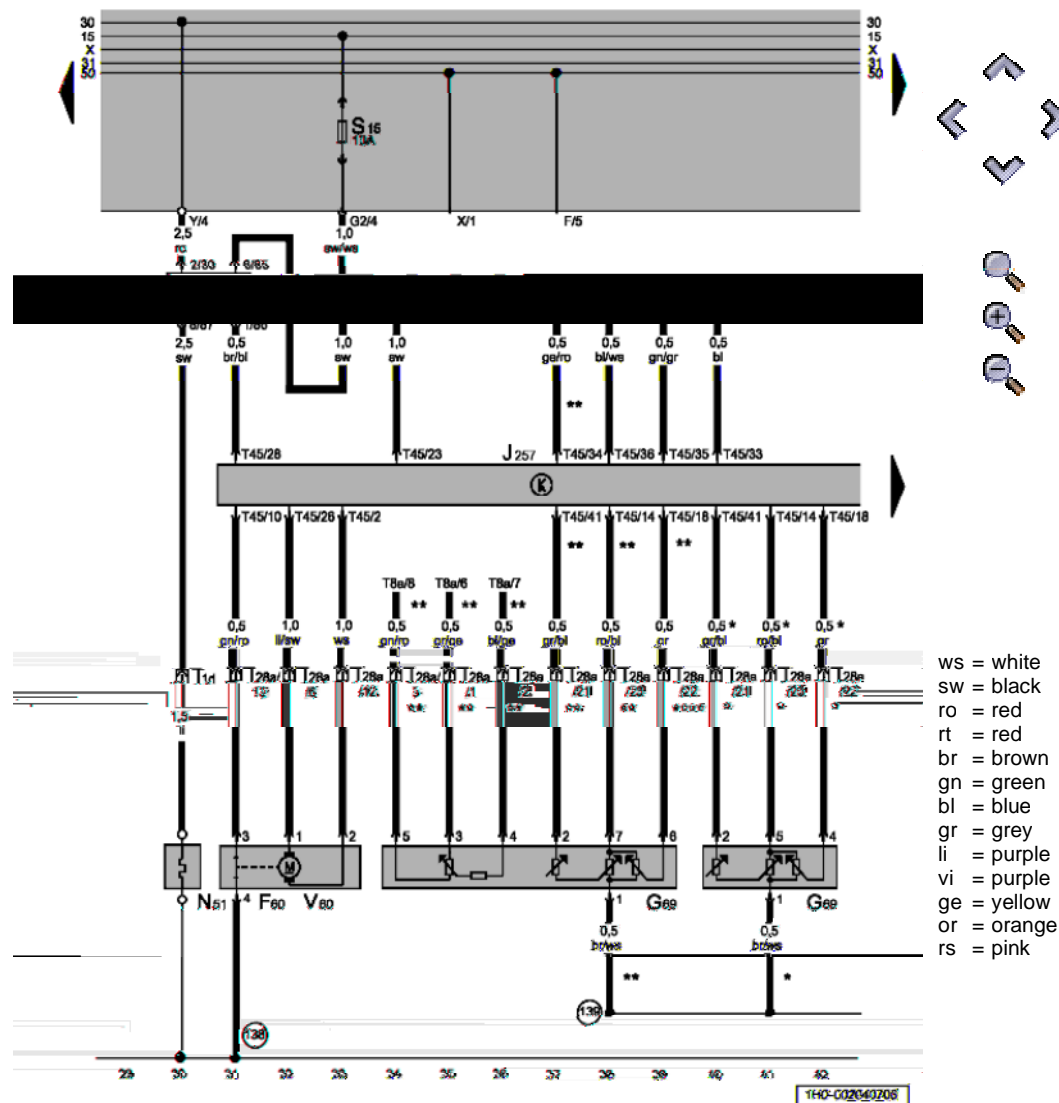

Mono-Motronic control unit, intake manifold preheating, throttle valve potentiometer


- F60 - Idling speed switch
- G69 - Throttle valve potentiometer
- J81 - Intake manifold preheating relay
- J257 - Mono-Motronic control unit
- N51 - Intake manifold preheating heater element
- T1d - 1-pin connector, near intake manifold
- T2n - 2-pin connector, behind the relay plate
- T8a - 8-pin connector, behind the relay plate
- T28a - 28-pin connector, on engine
- T45 - 45-pin connector
- V60 - Throttle valve positioner
- 138 - Earth connection (control unit), in Mono-Motronic wiring harness
- 139 - Earth connection (sender earth), in Mono-Motronic wiring harness
- E12 - Positive connection 1 (15), in Mono-Motronic wiring harness

- * - only manual gearbox
- ** - only automatic gearbox

Golf/Vento

Current Flow Diagram

No. 2 / 5

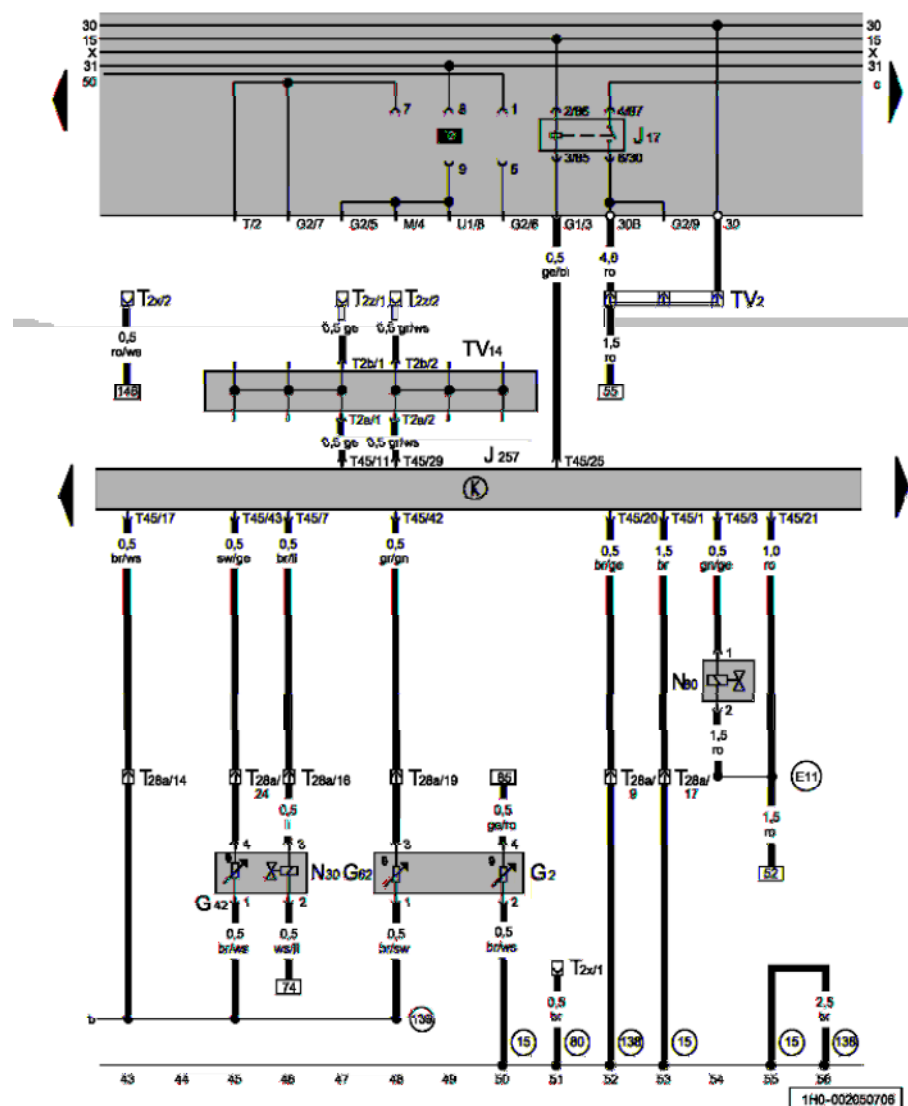

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Mono-Motronic control unit, injectors

- G2 - Coolant temperature display sender
- G42 - Intake air temperature sender
- G62 - Coolant temperature sender
- J17 - Fuel pump relay
- J257 - Mono-Motronic control unit
- N30 - Injector
- N80 - Activated charcoal filter system solenoid valve 1 (pulsed)
- T2a - 2-pin connector
- T2b - 2-pin connector
- T2x - 2-pin connector, behind centre dash panel - self-diagnosis connection - *
- T2z - 2-pin connector, behind centre dash panel - self-diagnosis connection - *
- T28 - 28-pin connector, on engine
- T45 - 45-pin connector
- TV2 - Terminal 30 wiring junction, behind the relay plate
- TV14 - Self-diagnosis wiring junction, above the relay plate
- 15 - Earth point, on cylinder head
- 80 - Earth connection 1, in dash panel wiring harness
- 138 - Earth connection (control unit), in Mono-Motronic wiring harness
- 139 - Earth connection (sender earth), in Mono-Motronic wiring harness
- E11 - Positive connection (30), in Mono-Motronic wiring harness
- * - from model year 1994 see Current Flow Diagram self-diagnosis -connection bus!


1H0-002050708


Golf/Vento

Current Flow Diagram

No. 2 / 6


Mono-Motronic control unit, lambda probe

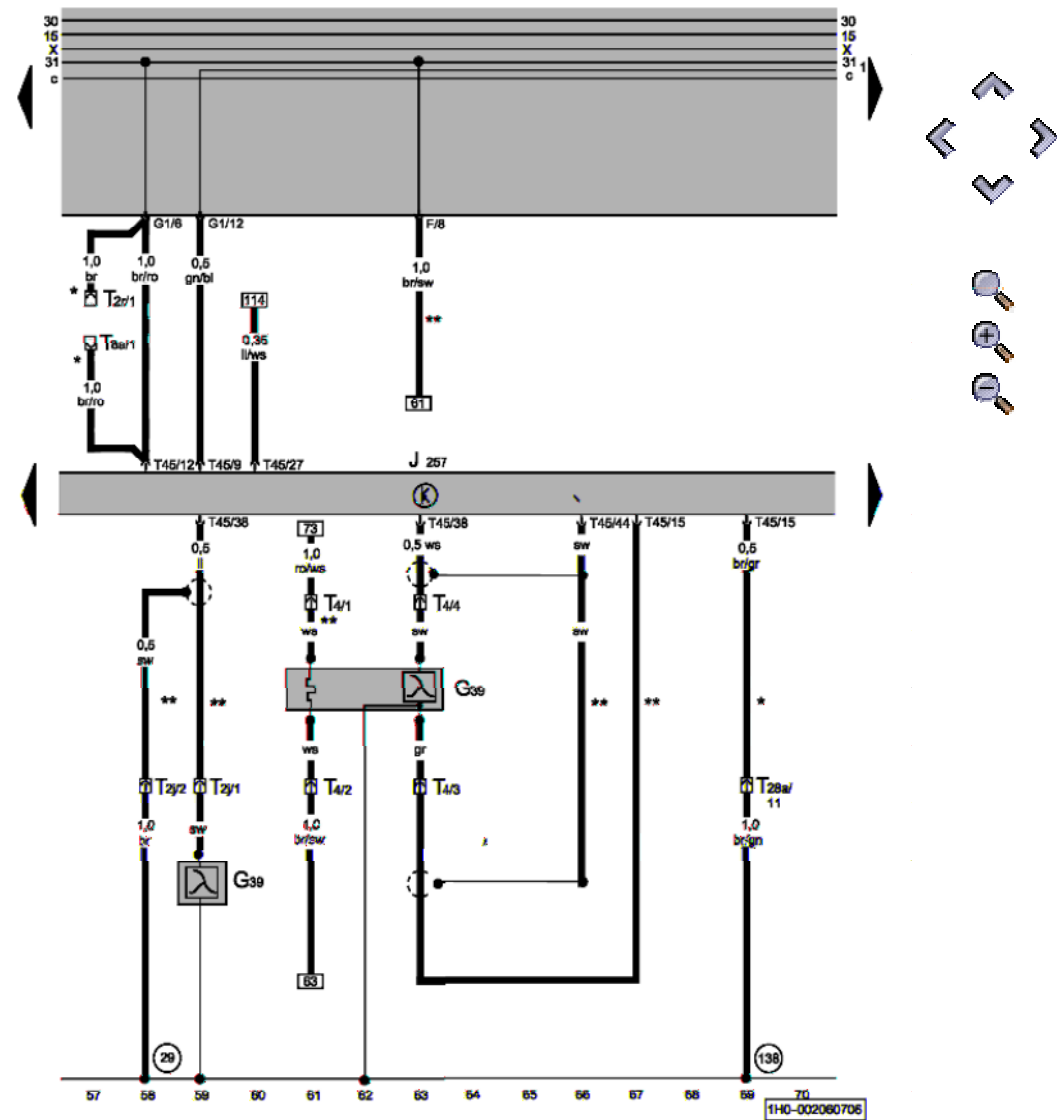


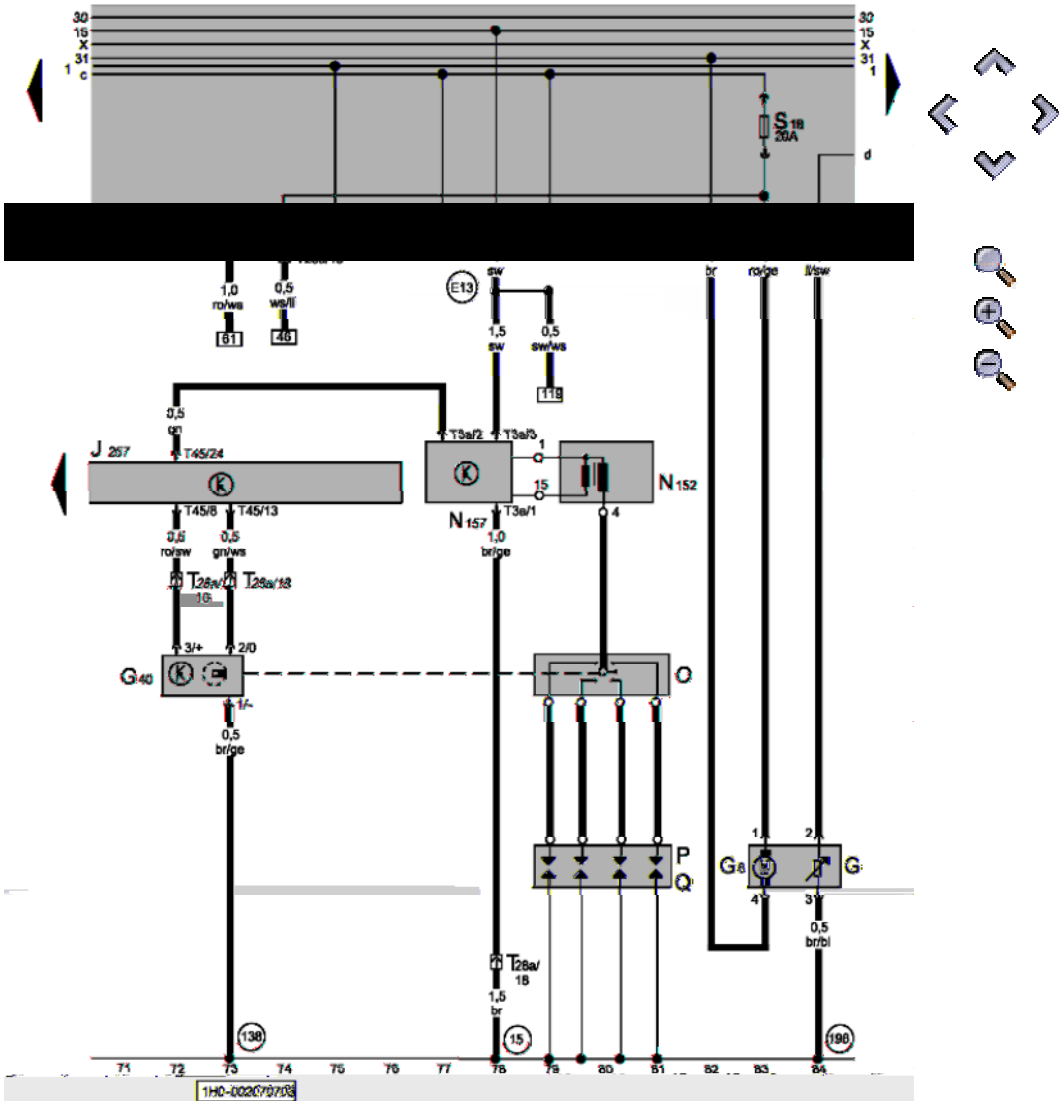

Mono-Motronic control unit, ignition system, fuel pump


Golf/Vento

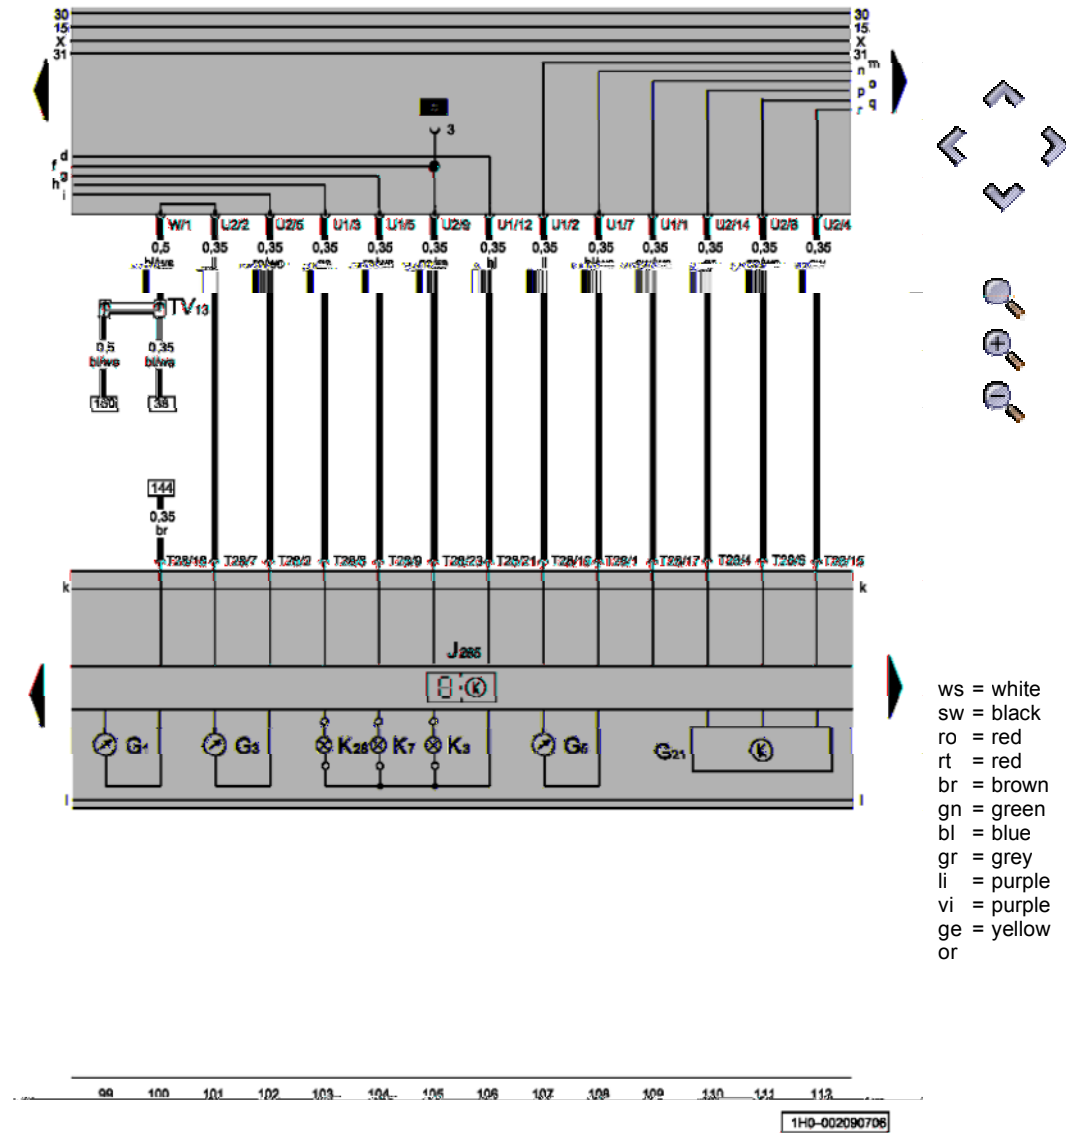

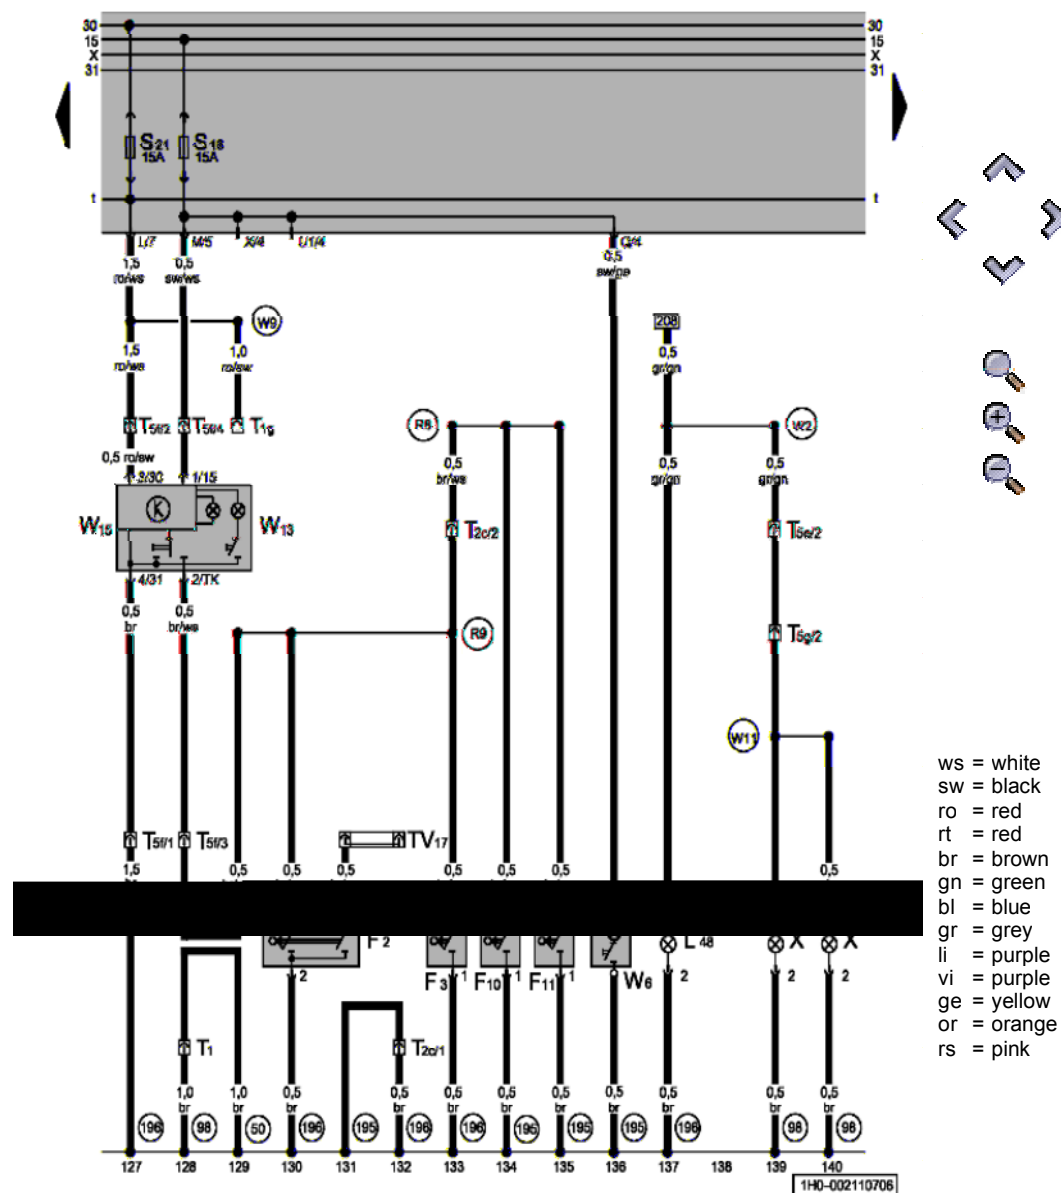


Rear interior light, rear ashtray illumination, number plate lights

- F2 - Front left contact switch
- F3 - Front right contact switch
- F10 - Rear left door contact switch
- F11 - Rear right door contact switch
- L48 - Ashtray illumination bulb, rear
- T1 - 1-pin connector, on left in luggage compartment
- T1g - Single connector, behind the relay plate, connection for central locking
- T2c - 2-pin connector, on left C-pillar
- T4a - 4-pin connector, behind the relay plate
- T5e - 5-pin connector, on rear cross-panel
- T5f - 5-pin connector, above the relay plate
- T5g - 5-pin connector, on left in luggage compartment
- TV17 - Door contact switch wiring junction, above the relay plate
- W6 - Glove compartment light
- W13 - Front passenger reading light
- W15 - Interior light with switch-off delay
- X - Number plate light
- 50 - Earth point, on left in luggage compartment
- 98 - Earth connection, in rear lid wiring harness
- 195 - Earth connection, in rear door switch wiring harness
- 196 - Earth connection 1, in rear wiring harness
- R8 - Connection (door contact switch), in rear door contact switch wiring harness
- R9 - Connection (door contact switch), in rear wiring harness
- W2 - Positive connection (58), in rear wiring harness
- W9 - Positive connection (30), in rear wiring harness
- W11 - Connection (58), in rear lid wiring harness

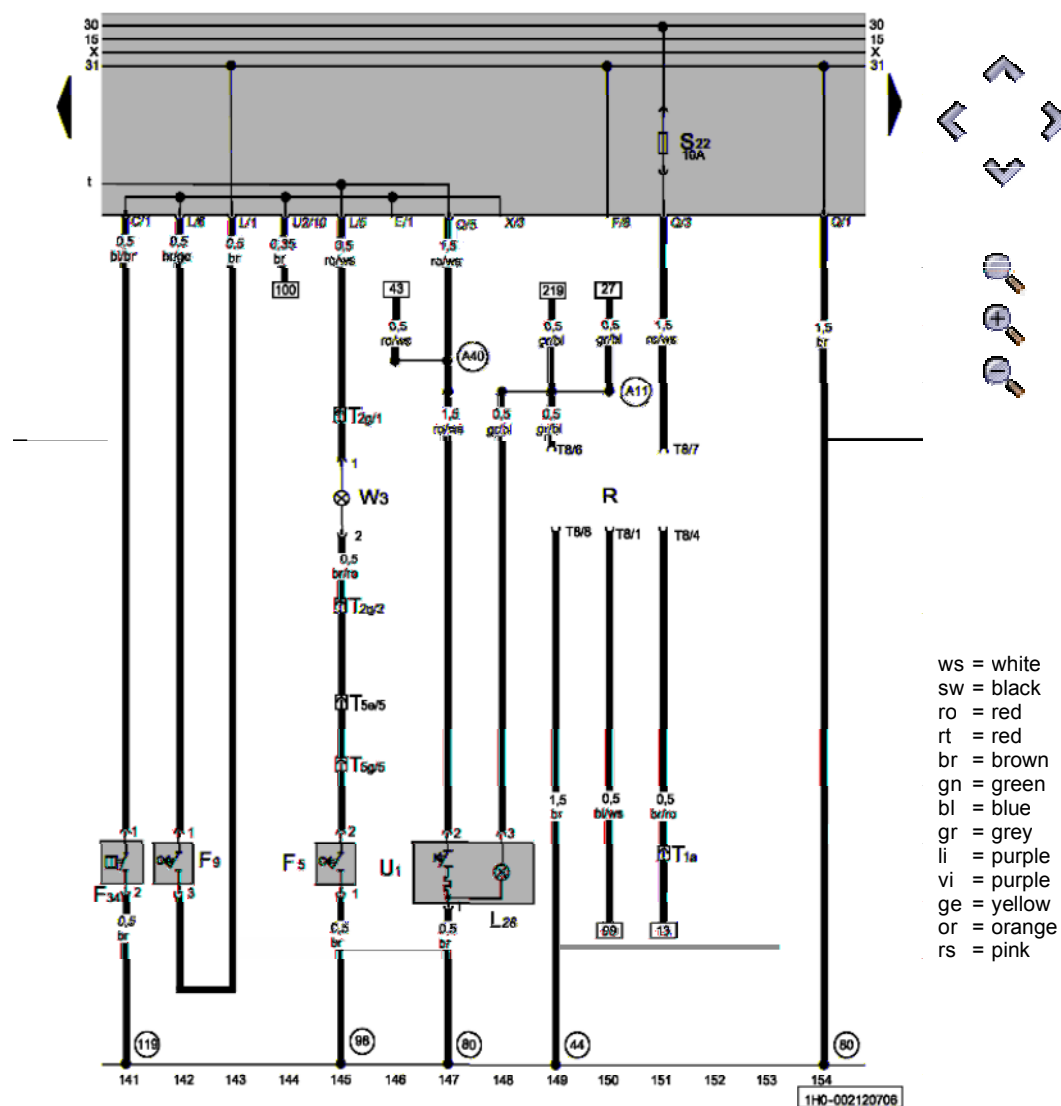

Handbrake warning switch and brake fluid level warning contact, luggage compartment light, connection for radio, cigarette lighter

- F5 - Luggage compartment light switch
- F9 - Handbrake warning switch
- F34 - Brake fluid level warning contact
- L28 - Cigarette lighter illumination bulb
- R - Radio
- T1a - 1-pin connector, above the relay plate
- T2g - 2-
- T5e - 5-pin connector, on rear cross-panel
- T5g - 5-
- T8 - 8-pin connector, on radio
- U1 - Cigarette lighter
- W3 - Luggage compartment light
- 44 - Earth point, lower part of left A-pillar
- 80 - Earth connection 1, in dash panel wiring harness
- 98 - Earth connection, in rear lid wiring harness
- 119 - Earth connection 1, in headlight wiring harness
- A11 - Positive connection (58b), in dash panel wiring harness
- A40 - Positive connection -1- (30), in dash panel wiring harness

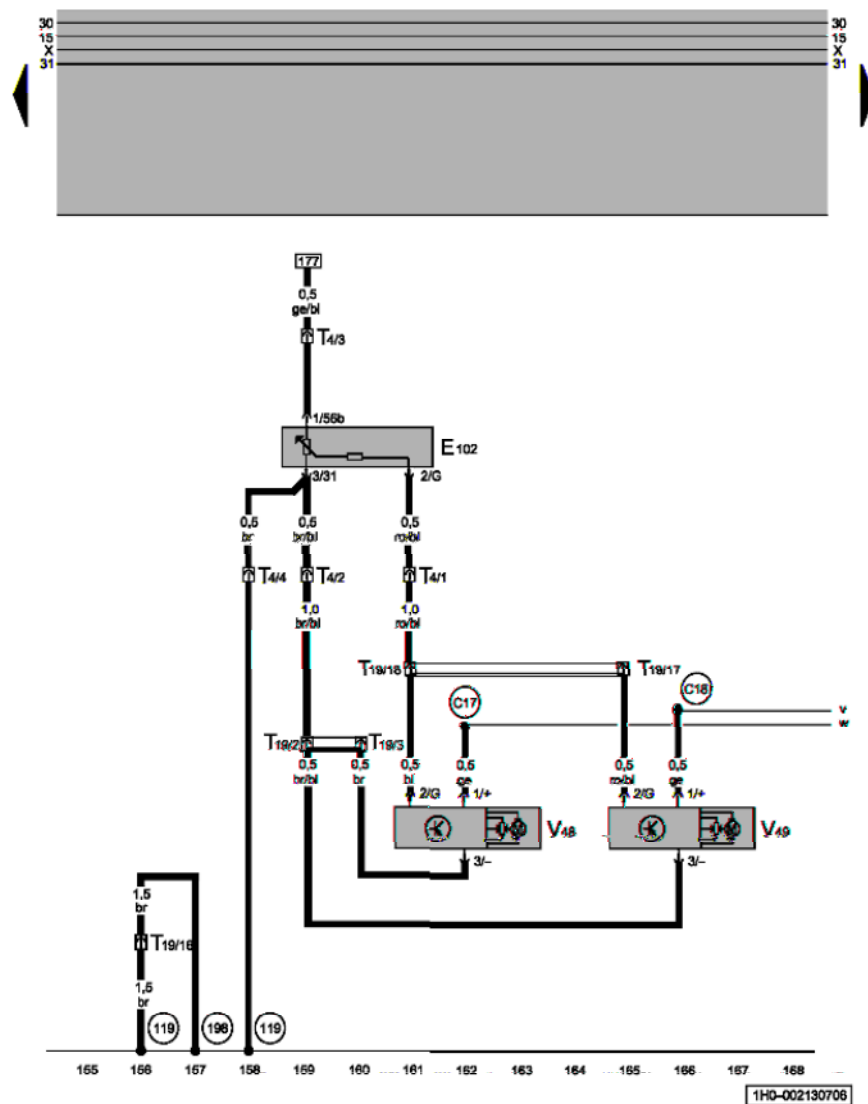

Headlight range control


- E102 - Headlight range control regulator
- T4 - 4-pin connector, on left in bulkhead
- T19 - 19-pin connector, behind right radiator
- V48 - Left headlight range control motor
- V49 - Right headlight range control motor
- 17 - Earth point, on intake manifold
- 18 - Earth point, on engine block
- 119 - Earth connection 1, in headlight wiring harness
- 198 - Earth connection, in front lighting wiring harness

Golf/Vento


Current Flow Diagram

No. 2 / 14

Headlight, side light, headlight dipper/flasher switch

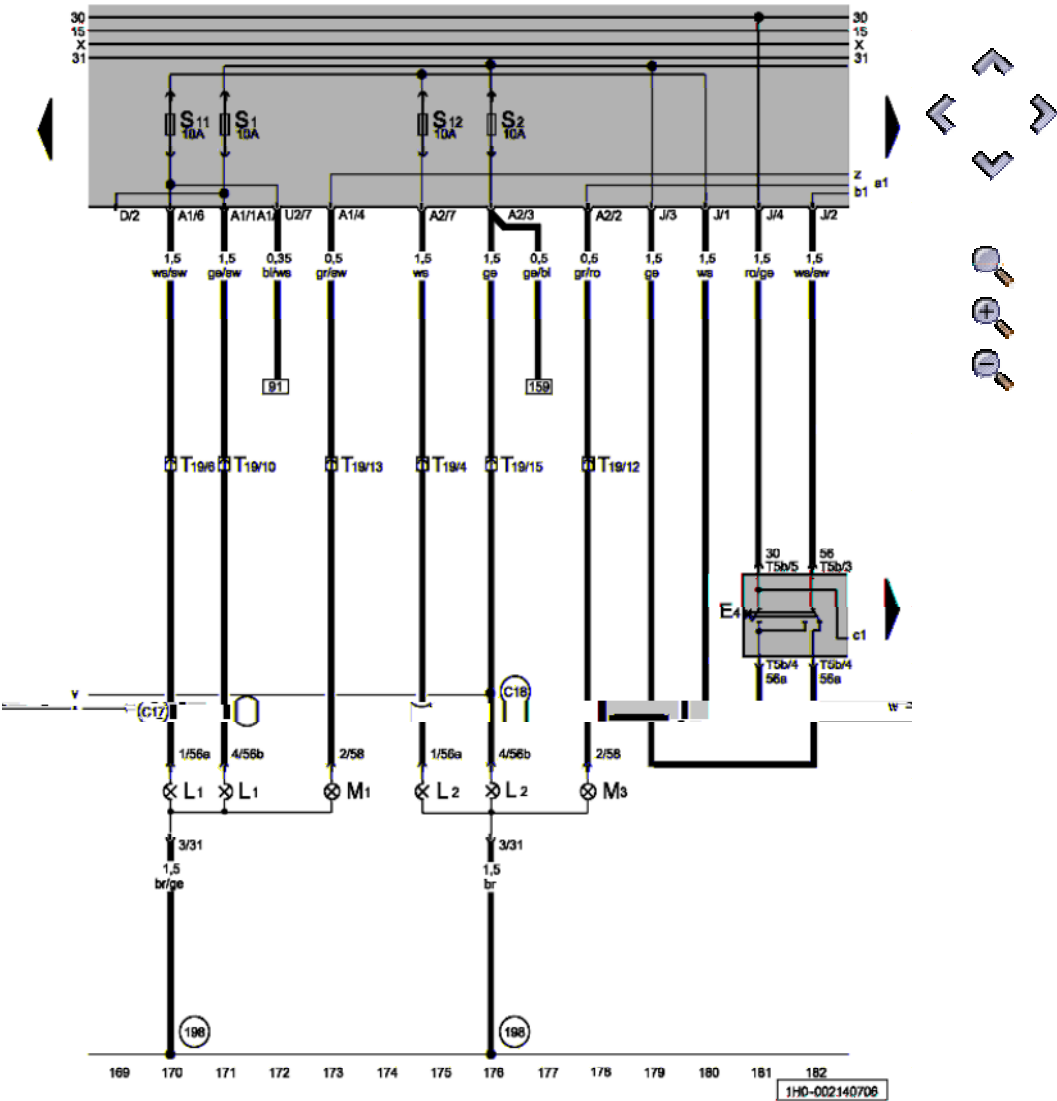


No. 2 / 15

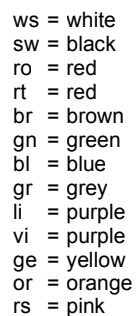


Golf/Vento

Current Flow Diagram

No. 2 / 16

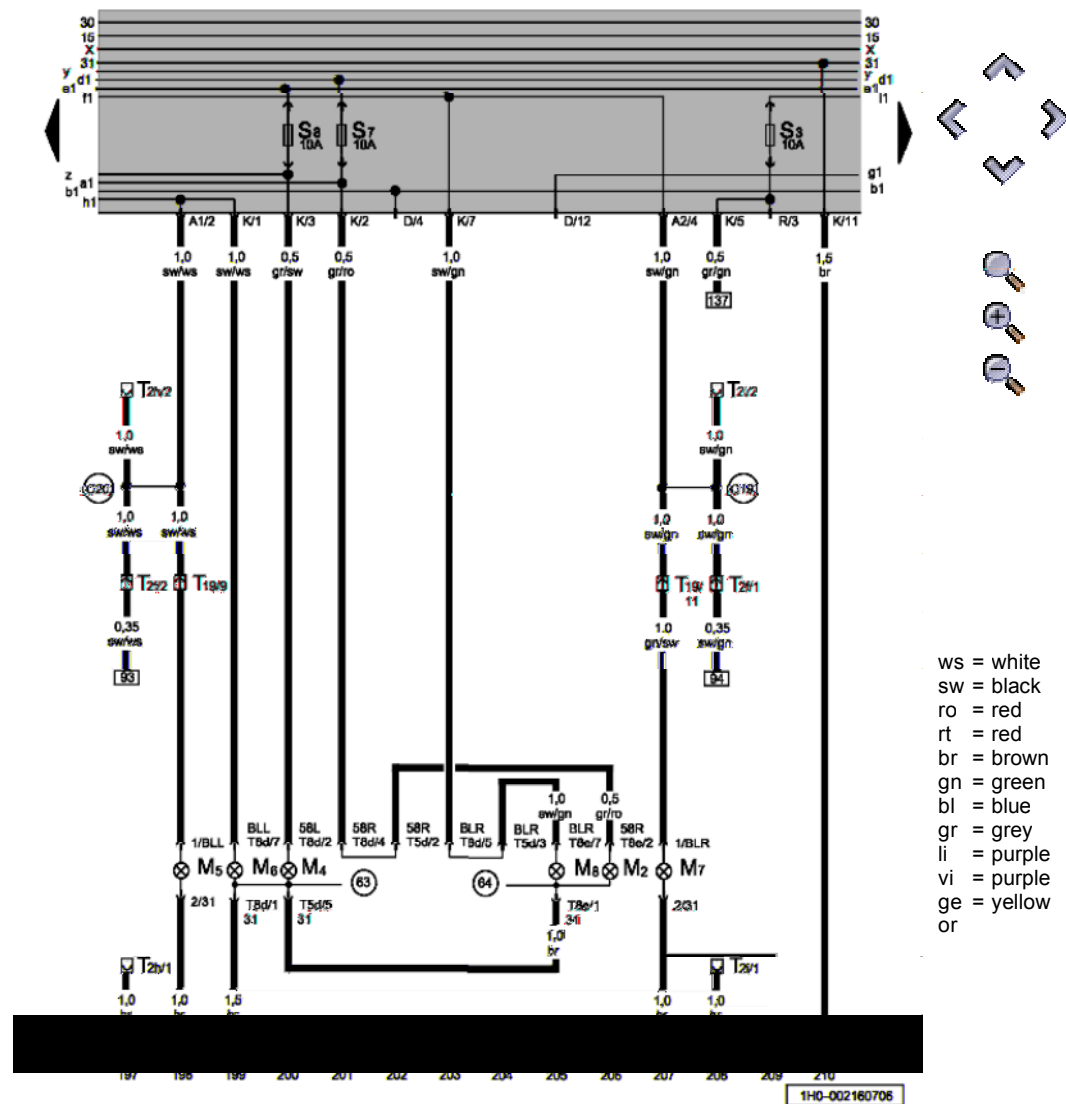

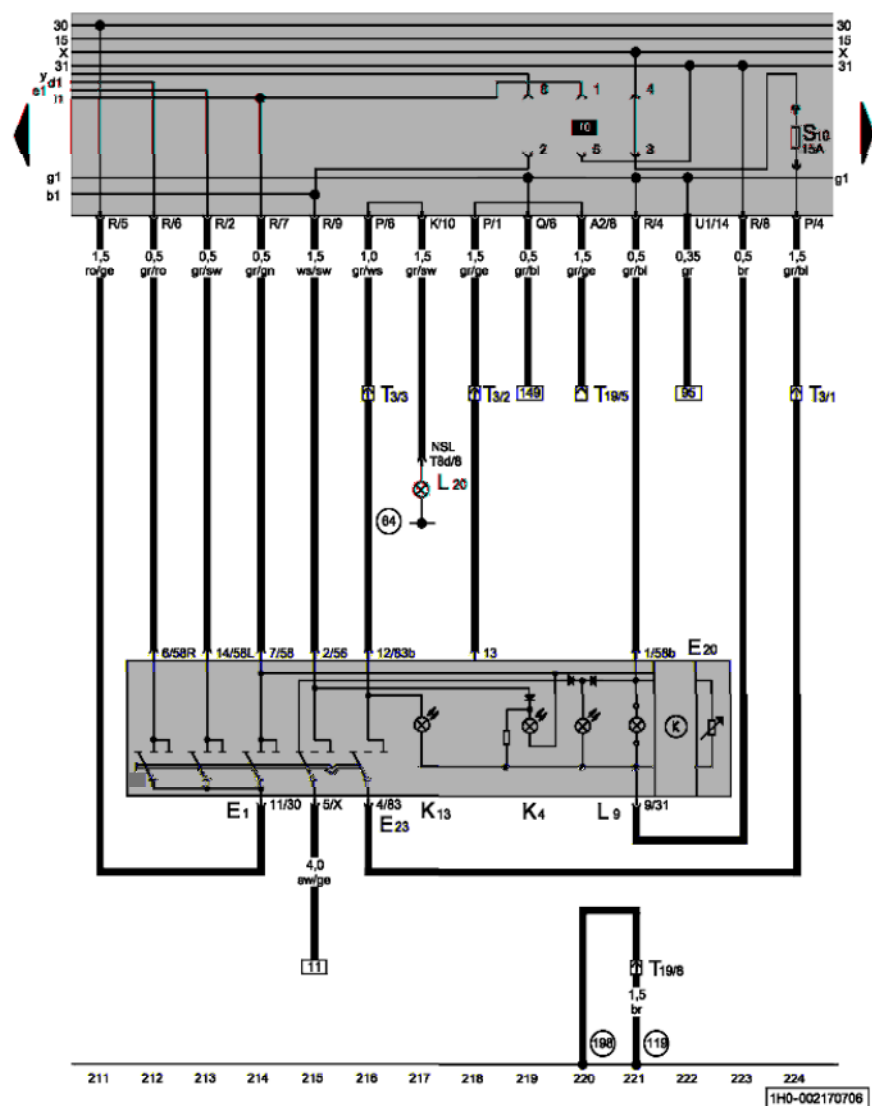
**Light switch, rear fog light**

- E1 - Light switch
- E20 - Illumination regulators - switches and instruments
- E23 - Front and rear fog light switch
- K4 - Side light warning lamp
- K13 - Rear fog light warning lamp
- L9 - Light switch illumination bulb
- L20 - Rear fog light bulb
- T3 - 3-pin connector, behind left dash panel
- T8d - 8-pin connector, on left rear fog light
- T19 - 19-pin connector, behind right radiator
- 64 - Earth point, right tail light bulb holder
- 119 - Earth connection 1, in headlight wiring harness

Golf/Vento


Current Flow Diagram

No. 2 / 18

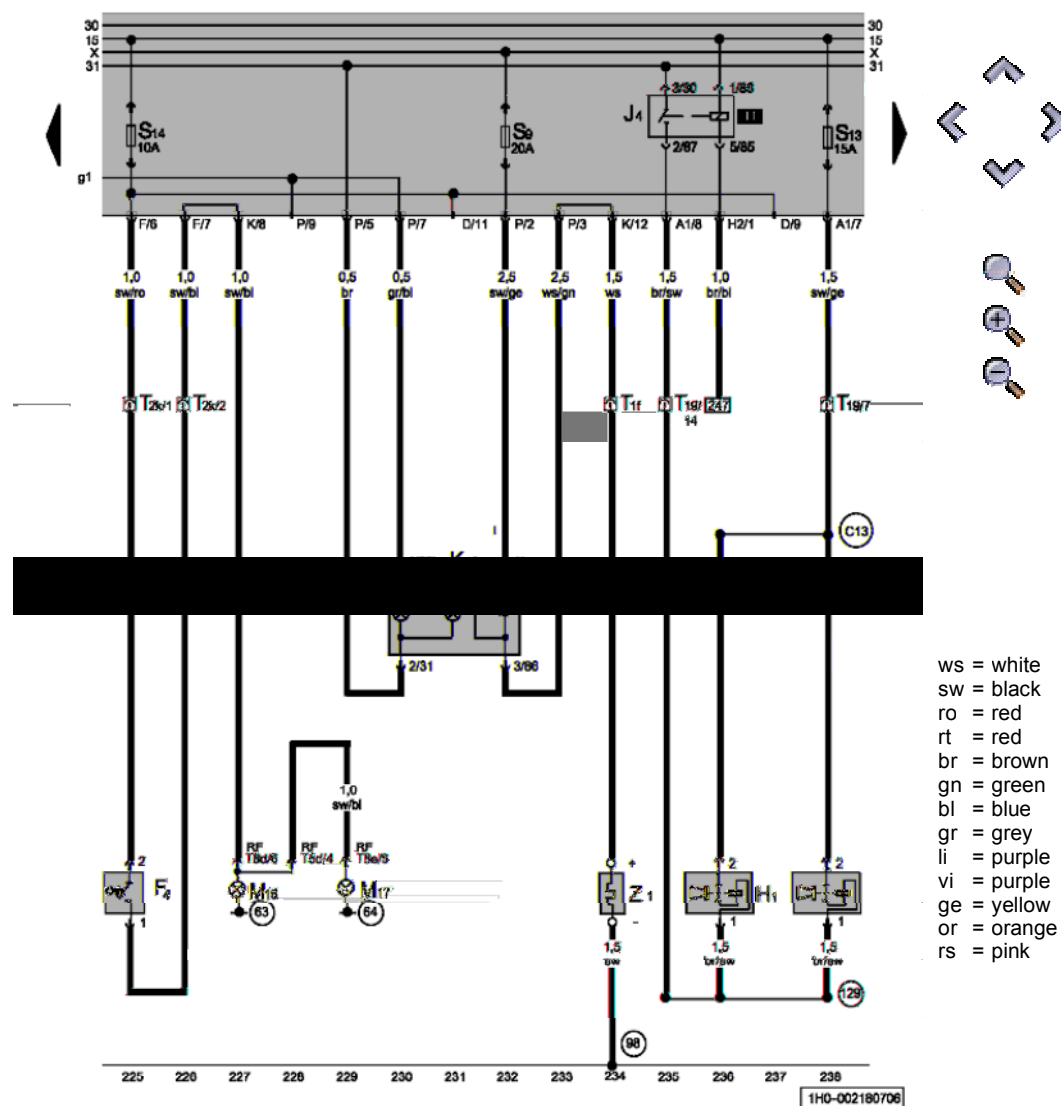

Reversing lights, heated rear window, dual tone horn


- E15 - Heated rear window switch
- F4 - Reversing light switch
- H1 - Dual tone horn
- J4 - Dual tone horn relay
- K10 - Heated rear window warning lamp
- L39 - Heated rear window switch illumination bulb
- M16 - Left reversing light bulb
- M17 - Right reversing light bulb
- T1f - Single connector, in luggage compartment, rear left
- T2k - 2-pin connector, behind the relay plate
- T5d - 5-pin connector, on left rear fog light
- T8d - 8-pin connector, on left rear fog light
- T8e - 8-pin connector, on right rear fog light
- T19 - 19-pin connector, behind right radiator
- Z1 - Heated rear window
- 63 - Earth point, left tail light bulb holder
- 64 - Earth point, right tail light bulb holder
- 98 - Earth connection, in rear lid wiring harness
- 129 - Earth connection, in dual tone horn wiring harness
- C13 - Positive connection in dual tone horn wiring harness

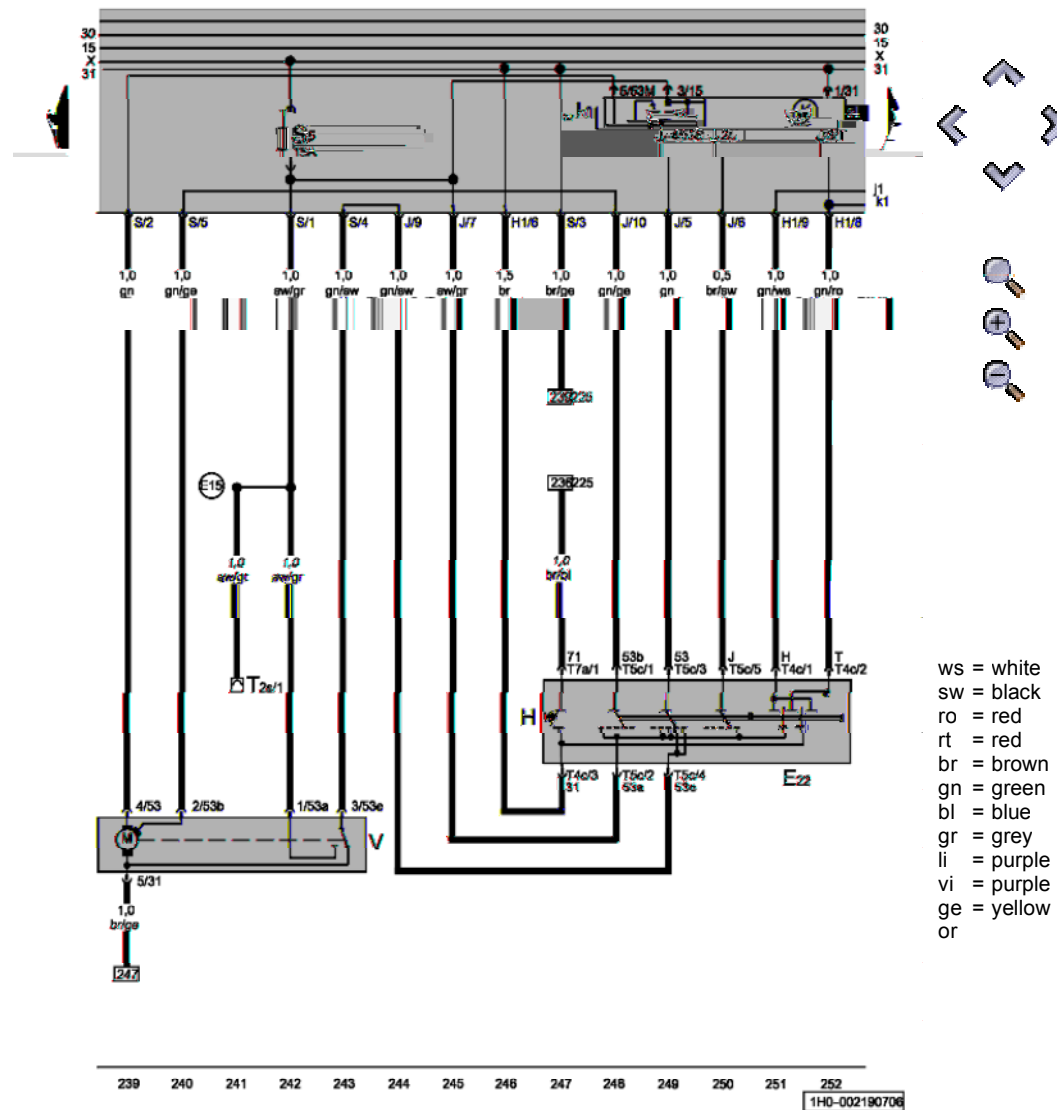

Golf/Vento

Current Flow Diagram

No. 2 / 20

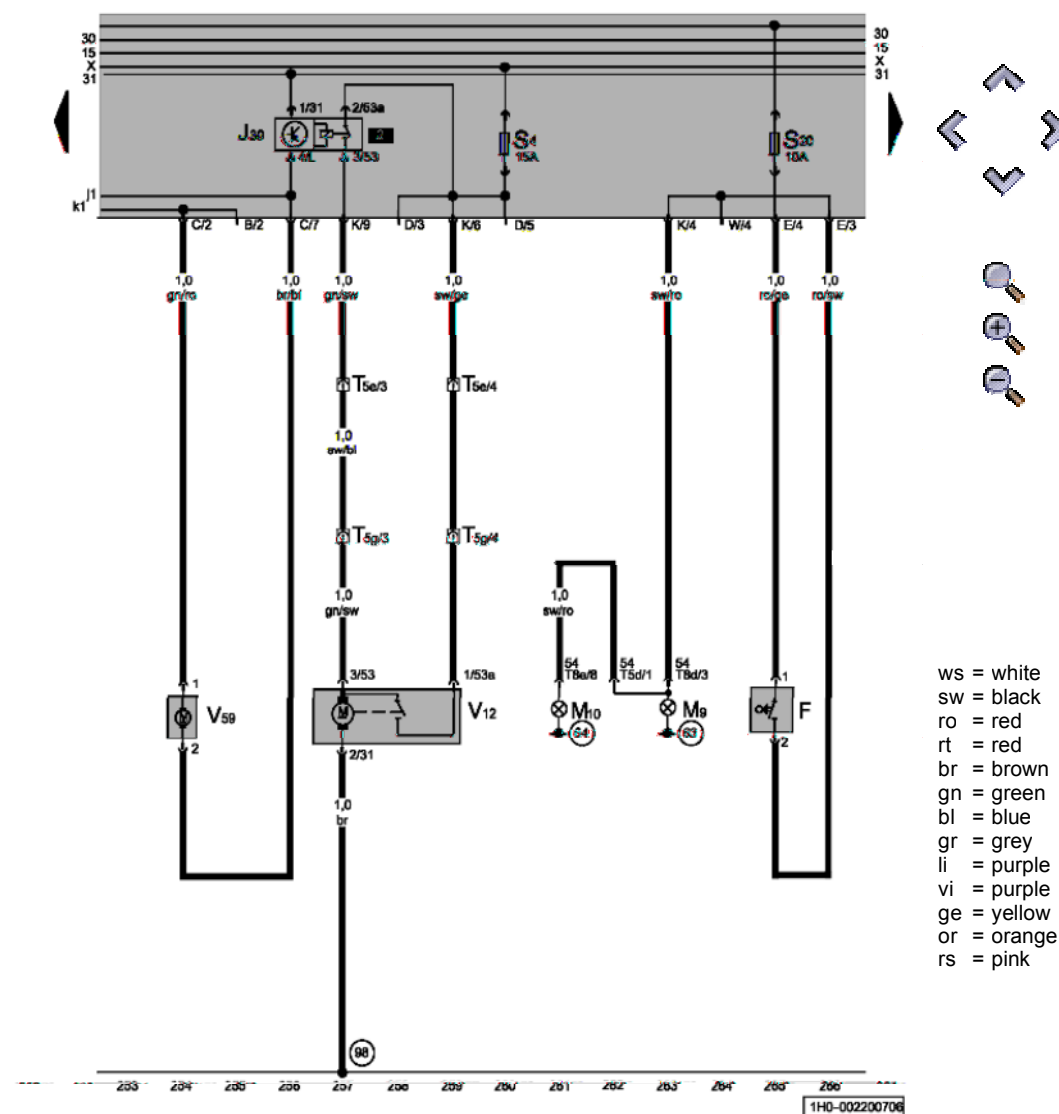

Rear window wiper and washer system, brake light

- F - Brake light switch
- J30 - Rear window wiper and washer relay
- M9 - Left brake light bulb
- M10 - Right brake light bulb
- T5d - 5-pin connector, on left rear fog light
- T5e - 5-pin connector, on rear cross-panel
- T5g - 5-pin connector, on left in luggage compartment
- T8d - 8-pin connector, on left rear fog light
- T8e - 8-pin connector, on right rear fog light
- V12 - Rear window wiper motor
- V59 - Windscreen and rear window washer pump
- 63 - Earth point, left tail light bulb holder
- 64 - Earth point, right tail light bulb holder
- 98 - Earth connection, in rear lid wiring harness